



Original		Replacement		Original		Replacement	
	Power		Power		CH +		CH+ / Page+
	Mute		Mute / Dimmer		Vol -		Vol-
	1		1		Input		AV / Input / RDS
	2		2		CH -		CH- / Page-
	3		3		Up		Up
	4		4		Left		Left
	5		5		Enter		OK
	6		6		Right		Right
	7		7		Menu		Menu / Home
	8		8		Down		Down
	9		9		Exit		Exit / Cancel / Clear
	-/--		Shift + Guide / EPG / -/--		Display		Display / Media
	0		0		PMode		Picture / Format
	Recall		Back / Return		S.Mode		Sound / Title
	Vol +		Vol+		Sleep		Sleep / Timer
	Aspect		Shift + Picture / Format		FAV		Fav / Marker / PC
	Nicam		Audio / Lang I/II		FAV -		Shift + Down





Original	Replacement	Original	Replacement
	FAV +		Shift + Media
	EPG		Shift + Display / Media
	Text		TV/Radio /
	Hold		Red / TV/Radio
	Lang		Red / Netflix / Search
	Subtitle		Green / APP / Repeat
	Index / <<<		Yellow / YouTube / Repeat
	Index / <<<		Blue / Prime Video / Random
	Size / >>>		
	Size / >>>		
	Reveal / <<<		
	Subpage / >>>		
	Subpage / >>>		
	Rec		
	Play / Pause		
	Play / Pause		
	Stop		

