 



 


 
 
 
 

 
 



 



 
 


 
 
 
 

 
 
 

 
 
 

 



 
 
 

 
 




 
 
 

 

 

 

 





 

 

 

 
 
 
 

 

 
 
 
 

 












Original		Replacement		Original		Replacement	
	Power		Power		Xacti Menu		Blue
	Eco		Shift + 3D		1		1
	Audio		Dual		2		2
	On Timer		Text		3		3
	Caption		Subt		4		4
	Reset		3D		5		5
	Sleep		Sleep		6		6
	Picture		Format		7		7
	Sound		Shift + Dual		8		8
	Play		Play		9		9
	Pause		Pause		0		0
	Stop		Stop		--/Sub CH		Guide
	<<		<<		Input		AV
	>>		>>		Vol+		Vol +
	W		Red		Vol-		Vol -
	T		Green		Mute		Mute
	Camera		Yellow		CH+		Ch +





	Original	Replacement	Original	Replacement
	CH-			
	Recall			
	DYN Vol			
	USB			
	Pix Shape			
	Menu			
	Help			
	Info			
	Exit			
	Up			
	Down			
	Right			
	Left			
	Enter	