


 



 







 









 





 





 

 

 

 









 

 

 

 

 


 
 







 



 

 

 



 





 

 

 




Original	Replacement	Original	Replacement
	Power		Power
	Wide		3D
	Mute		Mute
	Tv/Input		TV/R
	^ A-B		Dual
	→←		List
	[Y]/[≡?]		Format
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	CS		Options
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Vol+		Vol +
	Vol-		Vol -
	PR+		Ch +
	PR-		Ch -
	Menu		Menu
	P≡P		Pre Ch
	TXT/TV		Text
	[≡+]		Smart
	O[≡x]		Subt
	Up		Up
	Down		Down





Original	Replacement	Original	Replacement
	Right		Right
	Left		Left
	OK/Enter		Ok
	Surround		Shift + Dual
	BASS		Info
	Timer		AV
	[≡◇]		Media
	Rec		Rec
	Pause		Pause
	Power Down		Shift + Power
	Stop		Stop
	<<		<<
	Play		Play
	>>		>>





