



Original	Replacement	Original	Replacement
 Power	 Power	 Info	 Info / Angle
 Mute	 Mute / Dimmer	 [I]/Menu	 Menu / Home
 Red	 Red / Netflix / Search	 Up	 Up
 Green	 Green / APP / Repeat	 Source	 AV / Input / RDS
 Yellow	 Yellow / YouTube / Repeat	 Left	 Left
 Blue	 Blue / Prime Video / Random	 OK	 OK
 << / [≡o]	 << / Tune-	 Right	 Right
 >> / [≡?]	 >> / Tune+	 Down	 Down
 << / [≡+]	 << / Preset-	 EPG	 Guide / EPG / -/-
 >> / [≡..]	 >> / Preset+	 Exit	 Exit / Cancel / Clear
 Play	 Play / Slow	 Vol+	 Vol+
 Pause	 Pause / Step / Freeze	 FAV	 Fav / Marker / PC
 Stop	 Stop / Hold	 CH+	 CH+ / Page+
 [≡i]	 Smart / List	 Vol-	 Vol-
 Text	 Text / Goto	 REP/Rec	 Rec / Rec Mode
 Subtitle	 Subtitle / EQ	 CH-	 CH- / Page-
 Freeze	 Shift + Pause / Step / Freeze	 1	 1





Original		Replacement		Original		Replacement	
2	2	DVD 2	2				
3	3	CD - STB 3	3				
4	4	VIDEO 4	4				
5	5	TAPE 5	5				
6	6	TUNER 6	6				
7	7	AUX - HDD 7	7				
8	8	USB 8	8				
9	9	BLUETOOTH 9	9				
AUDIO	Audio	LANG I/II AUDIO	Audio / Lang I/II				
0	0	HDMI - BAT 0	0				
RECALL	Recall	RETURN BACK	Back / Return				











Original	Replacement	Original	Replacement
Power	 Power	TXT/MIX	 Text / Goto
Mute	 Mute / Dimmer	Menu	 Menu / Home
Play	 Play / Slow	Up	 Up
Pause	 Pause / Step / Freeze	Info	 Info / Angle
Stop	 Stop / Hold	Left	 Left
Rec	 Rec / Rec Mode	Enter	 OK
<</Hold	 << / Tune-	Right	 Right
>>/Index	 >> / Tune+	Cancel	 Exit / Cancel / Clear
I<<	 I<< / Preset-	Down	 Down
>>I	 >>I / Preset+	Back	 Back / Return
Nicam/A2	 Audio / Lang I/II	Vol+	 Vol+
Subtitle	 Subtitle / EQ	List	 Smart / List
Subpage	 Eject / Surround	CH+	 CH+ / Page+
Size	 Zoom / Size	Vol-	 Vol-
Sleep	 Sleep / Timer	Mode	 Display / Media
DTV/Radio	 TV/Radio /	CH-	 CH- / Page-
Reveal	 D.Menu / Top	1	 1

Original	Replacement	Original	Replacement
Power	 Power	TXT/MIX	 Text / Goto
Mute	 Mute / Dimmer	Menu	 Menu / Home
Play	 Play / Slow	Up	 Up
Pause	 Pause / Step / Freeze	Info	 Info / Angle
Stop	 Stop / Hold	Left	 Left
Rec	 Rec / Rec Mode	Enter	 OK
<</Hold	 << / Tune-	Right	 Right
>>/Index	 >> / Tune+	Cancel	 Exit / Cancel / Clear
I<<	 I<< / Preset-	Down	 Down
>>I	 >>I / Preset+	Back	 Back / Return
Nicam/A2	 Audio / Lang I/II	Vol+	 Vol+
Subtitle	 Subtitle / EQ	List	 Smart / List
Subpage	 Eject / Surround	CH+	 CH+ / Page+
Size	 Zoom / Size	Vol-	 Vol-
Sleep	 Sleep / Timer	Mode	 Display / Media
DTV/Radio	 TV/Radio /	CH-	 CH- / Page-
Reveal	 D.Menu / Top	1	 1





Original	Replacement	Original	Replacement
2	 2	2	2
3	 3	3	3
4	 4	4	4
5	 5	5	5
6	 6	6	6
7	 7	7	7
8	 8	8	8
9	 9	9	9
EPG	 Guide / EPG / -/--		
0	 0	0	0
FAV	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
<</Hold	 Shift + Stop /		
FAV-	 Shift + Left		

Original	Replacement	Original	Replacement
FAV+	 Shift + Right		
-/--	 Shift + Guide / EPG / -/--		





Original	Replacement	Original	Replacement
Power	 Power	Up	 Up
Mute	 Mute / Dimmer	Info	 Info / Angle
Play	 Play / Slow	Left	 Left
Pause	 Pause / Step / Freeze	Ok	 OK
Stop	 Stop / Hold	Right	 Right
Rec	 Rec / Rec Mode	Exit	 Exit / Cancel / Clear
<</[Timer]	 << / Tune-	Down	 Down
>>/[≡?]	 >> / Tune+	Recall	 Back / Return
I<</[≡⇅]	 I<< / Preset-	Vol+	 Vol+
>>I/[≡...]	 >>I / Preset+	[≡i]	 Smart / List
Audio	 Audio / Lang I/II	Ch+	 CH+ / Page+
Subtitle	 Subtitle / EQ	Vol-	 Vol-
I<</[≡⇅]	 Zoom / Size	Ch-	 CH- / Page-
<</[Timer]	 Sleep / Timer	1	 1
Text	 Text / Goto	2	 2
Source/Av	 AV / Input / RDS	3	 3
[II]	 Menu / Home	4	 4

Original	Replacement	Original	Replacement
Power	 Power	Up	 Up
Mute	 Mute / Dimmer	Info	 Info / Angle
Play	 Play / Slow	Left	 Left
Pause	 Pause / Step / Freeze	Ok	 OK
Stop	 Stop / Hold	Right	 Right
Rec	 Rec / Rec Mode	Exit	 Exit / Cancel / Clear
<</[Timer]	 << / Tune-	Down	 Down
>>/[≡?]	 >> / Tune+	Recall	 Back / Return
I<</[≡⇅]	 I<< / Preset-	Vol+	 Vol+
>>I/[≡...]	 >>I / Preset+	[≡i]	 Smart / List
Audio	 Audio / Lang I/II	Ch+	 CH+ / Page+
Subtitle	 Subtitle / EQ	Vol-	 Vol-
I<</[≡⇅]	 Zoom / Size	Ch-	 CH- / Page-
<</[Timer]	 Sleep / Timer	1	 1
Text	 Text / Goto	2	 2
Source/Av	 AV / Input / RDS	3	 3
[II]	 Menu / Home	4	 4





Original	Replacement	Original	Replacement
5	TAPE 5		
6	TUNER 6		
7	AUX - HDD 7		
8	USB 8		
9	BLUETOOTH 9		
Epg	GUIDE EPG		
0	HDMI - SAT 0		
Fav	PC FAV MARKER		
Red	NETFLIX SEARCH		
Green	APP REPEAT		
Yellow	YouTube REPEAT A-B		
Blue	Prime Video RANDOM		
Freeze	SHIFT + STEP - FREEZE 		

