



















 








Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Menu		Menu / Home
	0		0
	Last		Back / Return
	Text		Text / Goto
	Up / CH +		Up
	Up / CH +		CH+ / Page+
	Exit		Exit / Cancel / Clear
	Left / Vol -		Vol-
	Left / Vol -		Left
	OK		OK
	Right / Vol +		Vol+
	Right / Vol +		Right
	Sub-T		Subtitle / EQ
	Down / CH -		Down
	Down / CH -		CH- / Page-
	Audio		Audio / Lang I/II
	Rec		Rec / Rec Mode
	Timer		Sleep / Timer
	Timeshift		Smart / List
	Info		Info / Angle
	Red / I<<		Red / Netflix / Search
	Red / I<<		I<< / Preset-
	Green / <<		<< / Tune-



