


 

 

 



 



 
 
 

 

 

 
 
 
 
 










Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 PR.List	 List
 Recall	 Back
 Vol +	 Vol +
 Vol -	 Vol -
 Pic. Mode	 Options

Original	Replacement
 S. Mode	 Dual
 Source	 AV
 Prog +	 Ch +
 Prog -	 Ch -
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 Exit	 Exit
 Menu	 Menu
 Zoom	 Eject
 Sleep	 Sleep
 DNR	 Shift + Options
 MTS	 Format
 Red	 Red
 Green	 Green





Original	Replacement	Original	Replacement
 Yellow	 Yellow		
 Blue	 Blue		
 FAV	 Pre Ch		
 TV / Radio	 TV/R		
 Audio	 Shift + Dual		
 Subtitle	 Subt		
 Size	 3D		
 Reveal	 D. Menu		
 EPG	 Guide		
 Info	 Info		
 Text	 Text		
 Index	 Shift + Info		
 Subpage	 Shift + Subt		
 Hold	 Stop		

