



Original	Replacement
 Power	 Power
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 TV/SAT	 AV / Input / RDS
 TV/Radio	 TV/Radio /
 Zoom	 Zoom / Size
 List	 Smart / List
 Audio	 Audio / Lang I/II
 EPG	 Guide / EPG / -/--
 Timer	 Sleep / Timer
 Text	 Text / Goto
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 M/P	 Display / Media
 Mute	 Mute / Dimmer

Original	Replacement
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 Vol+	 Vol+
 Vol-	 Vol-
 Recall	 Back / Return
 P+	 >> / Preset+
 P-	 << / Preset-
 FAV	 Fav / Marker / PC
 1	 1
 2	 2
 3	 3
 4	 4





Original		Replacement	
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI - BAT 0	0
INFO	Info	ANGLE INFO	Info / Angle
PAUSE	Pause	STEP - FREEZE II	Pause / Step / Freeze

Original		Replacement	





Original	Replacement
Power	Power
SAT	Smart / List
Info	Info / Angle
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0 / Zoom	Zoom / Size
0 / Zoom	0
Audio	Audio / Lang I/II
Mute	Mute / Dimmer
Recall	Back / Return

Original	Replacement
FAV	Fav / Marker / PC
Up / CH+	CH+ / Page+
Down / CH-	Down
Up / CH+	Up
Right / Vol+	Right
Right / Vol+	Vol+
Down / CH-	CH- / Page-
Left / Vol-	Vol-
Left / Vol-	Left
OK	OK
Menu	Menu / Home
Exit	Exit / Cancel / Clear
Blue / Pause	Blue / Prime Video / Random
Blue / Pause	Pause / Step / Freeze
Red / Text	Red / Netflix / Search
Red / Text	Text / Goto
Multivideo	Display / Media





















Original	Replacement	Original	Replacement
 Yellow / Subtitle	 Yellow / YouTube / Repeat		
 Yellow / Subtitle	 Subtitle / EQ		
 TV / AV	 AV / Input / RDS		
 Green / P/N	 Green / APP / Repeat		
 TV / Radio	 TV/Radio /		
 SAT	 Shift + 0		
 EPG	 Guide / EPG / -/--		





Original	Replacement	
Mute		Mute / Dimmer
PWR On/Off		Power
App	 + 	Shift + Green / APP /
Epg		Guide / EPG / -/--
Info		Info / Angle
Subt.List		Subtitle / EQ
TV		TV/Radio /
Text		Text / Goto
Zoom		Zoom / Size
Menu		Menu / Home
TV/SAT		AV / Input / RDS
Menu Up		Up
Display		Display / Media
Menu Left		Left
OK Enter		OK
Menu Right		Right
Exit		Exit / Cancel / Clear

Original	Replacement	
Menu Down		Down
Back		Back / Return
Volume+		Vol+
CH/Page+		CH+ / Page+
Volume-		Vol-
CH/Page-		CH- / Page-
Audio		Audio / Lang I/II
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7
8tuv		8
9wxyz		9
Guide Pilote	 + 	Shift + Guide / EPG / -/--

















































Original	Replacement	Original	Replacement
0/10	0		
FAV Pref.	Fav / Marker / PC		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
Dec/Pause	Pause / Step / Freeze		
	Smart / List		
	D.Menu / Top		

Original	Replacement











Original	Replacement	Original	Replacement
Power	 Power	Recall	 Back / Return
Mute	 Mute / Dimmer	Vol+	 Vol+
Pause	 Pause / Step / Freeze	List	 Smart / List
Audio	 Audio / Lang I/II	P+	 CH+ / Page+
Zoom	 Zoom / Size	Vol-	 Vol-
Timer	 Sleep / Timer	M/P	 Display / Media
Tv/Radio	 TV/Radio /	P-	 CH- / Page-
Text	 Text / Goto	1	 1
Tv/SAT	 AV / Input / RDS	2	 2
Menu	 Menu / Home	3	 3
Up/CH+	 Up	4	 4
Info	 Info / Angle	5	 5
Left	 Left	6	 6
OK	 OK	7	 7
Right	 Right	8	 8
Exit	 Exit / Cancel / Clear	9	 9
Down/CH-	 Down	EPG	 Guide / EPG / -/-

Original	Replacement	Original	Replacement
Power	 Power	Recall	 Back / Return
Mute	 Mute / Dimmer	Vol+	 Vol+
Pause	 Pause / Step / Freeze	List	 Smart / List
Audio	 Audio / Lang I/II	P+	 CH+ / Page+
Zoom	 Zoom / Size	Vol-	 Vol-
Timer	 Sleep / Timer	M/P	 Display / Media
Tv/Radio	 TV/Radio /	P-	 CH- / Page-
Text	 Text / Goto	1	 1
Tv/SAT	 AV / Input / RDS	2	 2
Menu	 Menu / Home	3	 3
Up/CH+	 Up	4	 4
Info	 Info / Angle	5	 5
Left	 Left	6	 6
OK	 OK	7	 7
Right	 Right	8	 8
Exit	 Exit / Cancel / Clear	9	 9
Down/CH-	 Down	EPG	 Guide / EPG / -/-





Original	Replacement	Original	Replacement
0/Sleeptimer	 0		
FAV	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		

