








 










 




 




























 



Original	Replacement
	 Mute / Dimmer
	 Power
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Guide / EPG / -/-
	 Info / Angle
	 0
	 Smart / List
	 CH+ / Page+
	 Up

Original	Replacement
	 Left
	 Vol-
	 OK
	 Vol+
	 Right
	 Down
	 CH- / Page-
	 Exit / Cancel / Clear
	 Menu / Home
	 Rec / Rec Mode
	 Back / Return
	 Red / Netflix / Search
	 << / Tune-
	 Play / Slow
	 Green / APP / Repeat
	 >> / Tune+
	 Blue / Prime Video / Random





Original		Replacement	
	Blue / >> / Text		Text / Goto
	Radio	 + 	Shift + 6
	Radio	 + 	Shift + TV/Radio / Program
	Yellow / Pause		Pause / Step / Freeze
	Yellow / Pause		Yellow / YouTube / Repeat
	Stop		Stop / Hold
	TV	 + 	Shift + 1
	TV		TV/Radio /
	F1		Sound / Title
	F2		Audio / Lang I/II

Original		Replacement	

