 



 











 



 



 

 

 

 

 



 

 

 



 


 
 

 

 







 











Original		Replacement		Original		Replacement	
	Power		Power		3		3
	[i+]		Info / Angle		4		4
	P.Info		Display / Media		5		5
	ATV		Shift + Smart / List		6		6
	DTV		Smart / List		7		7
	SAT		Shift + 0		8		8
	Radio		TV/Radio /		9		9
	Power Source		Shift + Power		Return		Shift + Back / Return
	<< Source		<< / Tune-		0		0
	Play Source		Play / Slow		Source		AV / Input / RDS
	>> Source		>> / Tune+		I/II/I-II		Audio / Lang I/II
	Option Source		Setup / OPT /		[<I>]		Picture / Format
	Rec Source		Rec / Rec Mode		AV Mode		Shift + AV / Input / RDS
	Rec Stop		Pause / Step / Freeze		Eco		Sound / Title
	Stop Source		Stop / Hold		Mute		Mute / Dimmer
	1		1		Vol+		Vol+
	2		2		PR+		CH+ / Page+





Original	Replacement	Original	Replacement
Text	Text / Goto	Red	Red / Netflix / Search
Vol-	Vol-	Green	Green / APP / Repeat
PR-	CH- / Page-	Yellow	Yellow / YouTube / Repeat
Control	D.Menu / Top	Blue	Blue / Prime Video / Random
Menu	Menu / Home		
EPG	Guide / EPG / -/--		
Up	Up		
Left	Left		
OK	OK		
Right	Right		
End	Exit / Cancel / Clear		
Down	Down		
Back	Back / Return		
[...]	Subtitle / EQ		
[≡?]	Eject / Surround		
[≡o]	Sleep / Timer		
[≡+]	+ Shift + Stop / Hold		

Original	Replacement
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

