 












 



 



 

 

 

 

 









 













 








 


 

 

 







 











 
 




 

| Original | Replacement |
|--|---|
|  Power Tv |  Power |
|  Control |  Smart / List |
|  [i+] |  Info / Angle |
|  P.Info |  Shift + Info / Angle |
|  ATV |  Shift + Display / Media |
|  DTV |  Display / Media |
|  SAT |  Shift + 0 |
|  Radio |  TV/Radio / |
|  Power Ext. Media |  Shift + Power |
|  ← |  Shift + Left |
|  Pause |  Pause / Step / Freeze |
|  → |  Shift + Right |
|  Rec |  Rec / Rec Mode |
|  << |  << / Tune- |
|  Play |  Play / Slow |
|  >> |  >> / Tune+ |
|  Rec Stop |  Shift + Rec / Rec Mode |

| Original | Replacement |
|---|--|
|  I<< |  I<< / Preset- |
|  Stop |  Stop / Hold |
|  >>I |  >>I / Preset+ |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  Recall |  Fav / Marker / PC |
|  0 |  0 |
|  Source |  AV / Input / RDS |
|  AV Mode |  Shift + AV / Input / RDS |
|  [<>] |  Picture / Format |





| Original | Replacement |
|--|---|
|  APP |  Shift + Green / APP / |
|  Eco |  Setup / OPT / |
|  I/II/I+II/▼/O) |  Audio / Lang I/II |
|  Vol+ |  Vol+ |
|  P+ |  CH+ / Page+ |
|  [≡] |  Text / Goto |
|  Mute |  Mute / Dimmer |
|  Vol- |  Vol- |
|  P- |  CH- / Page- |
|  Menu |  Menu / Home |
|  3D |  Shift + 3 |
|  Home |  Shift + Menu / |
|  EPG |  Guide / EPG / -/-- |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |

| Original | Replacement |
|--|--|
|  End |  Exit / Cancel / Clear |
|  Down |  Down |
|  Back |  Back / Return |
|  [...] |  Subtitle / EQ |
|  [≡?] |  D.Menu / Top |
|  [≡O] |  Sleep / Timer |
|  [≡+] |  Shift + Stop / |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

