

 



 



 



 

 
 
 



 



 
 


 
 
 
 


 
 
 
 
 
 
 




 
 

 

 
 



 
 

 










Original	Replacement	Original	Replacement
 POWER	 Power	 AD	 Shift + Subt
 INPUT	 AV	 [i+]/[≡i]	 Info
 1	 1	 P+	 Ch +
 2	 2	 P-	 Ch -
 3	 3	 VOL +	 Vol +
 4	 4	 VOL -	 Vol -
 5	 5	 MUTE	 Mute
 6	 6	 TEXT [≡]	 Text
 7	 7	 [...]	 Subt
 8	 8	 Timer	 Shift + AV
 9	 9	 EXIT	 Exit
 0	 0	 ^	 Up
 EPG	 Guide	 v	 Down
 DTV/ATV	 TV/R	 >	 Right
 ASPECT	 3D	 <	 Left
 FREEZE	 Pause	 OK	 Ok
 O)I/II	 Dual	 MENU	 Menu



