











































 



 

 









Original	Replacement
	 Power
	 Green / APP / Repeat
	 Menu / Home
	 Sleep / Timer
	 Mute / Dimmer
	 Red / Netflix / Search
	 Back / Return
	 Exit / Cancel / Clear
	 Up
	 OK
	 Picture / Format
	 Down
	 Right
	 Left
	 Display / Media
	 1
	 Info / Angle

Original	Replacement
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 AV / Input / RDS
	 << / Tune-
	 Play / Slow
	 Guide / EPG / -/--
	 >> / Tune+
	 Rec / Rec Mode
	 CH+ / Page+
	 CH- / Page-



