




 

 




 

 












 





 



 

 

 









 







Original	Replacement
 Source	 AV / Input / RDS
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 EPG	 Guide / EPG / -/--
 0	 0
 PRE PR	 Back / Return
 DTV/ATV	 Setup / OPT /
 PR List	 Smart / List
 ECO	 Fav / Marker / PC

Original	Replacement
 [i+]	 Info / Angle
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 PR+	 CH+ / Page+
 Vol-	 Vol-
 [<>]	 Picture / Format
 PR-	 CH- / Page-
 Dual	 Audio / Lang I/II
 AJD Audio	 Sound / Title
 ADJ Video	 D.Menu / Top
 Sleep	 Sleep / Timer
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down





Original	Replacement	Original	Replacement
Exit	Exit / Cancel / Clear		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
Teletext	Text / Goto		
Subtitle	Subtitle / EQ		
Size	Zoom / Size		
Subpage	Eject / Surround		
Index	Display / Media		
Hold	Shift + Stop /		
Reveal	TV/Radio /		
Freeze	Pause / Step / Freeze		
I<<	I<< / Preset-		
Stop	Stop / Hold		
Play/Pause	Play / Slow		
>>I	>>I / Preset+		

Original	Replacement

