










 



 




 
 



 














 

 
 









Original	Replacement
 Open / Close	 Eject / Surround
 Set Up	 Setup / OPT /
 Mute	 Mute / Dimmer
 On / Stand-by	 Power
 Title	 Sound / Title
 Subtitle	 Subtitle / EQ
 Language	 Shift + Audio / Lang I/II
 Display	 Display / Media
 DVD	 Shift + 2
 TUNER	 Shift + 6
 AUX	 Shift + 7
 Menu / PBC	 Menu / Home
 Up	 Up
 St/Mo	 Shift + Sound / Title
 Left	 Left
 Enter	 OK
 Right	 Right

Original	Replacement
 Prog	 TV/Radio /
 Down	 Down
 Sleep	 Sleep / Timer
 Slow / Memory	 Shift + Play /
 Play / Pause	 Play / Slow
 Stop	 Stop / Hold
 << / Preset-	 << / Tune-
 << / Preset-	 Shift + I<< / Preset-
 >> / Preset+	 >> / Tune+
 >> / Preset+	 Shift + >>I / Preset+
 I<< / Tuning-	 I<< / Preset-
 I<< / Tuning-	 Shift + << /
 >>I / Tuning+	 Shift + >> /
 >>I / Tuning+	 >>I / Preset+
 Listening	 D.Menu / Top
 Mode	 Smart / List
 Adj/Vol-	 Vol-





Original	Replacement
Adj/Vol+	Vol+
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
>10	Guide / EPG / -/--
Step	Pause / Step / Freeze
Direct	AV / Input / RDS
Return	Back / Return
Repeat	Green / APP / Repeat
A-B	Yellow / YouTube / Repeat

Original	Replacement
Angle	Info / Angle
Zoom	Zoom / Size
Audio	Audio / Lang I/II
NTSC/PAL	Picture / Format

