
 






 

 











 

 













Original	Replacement
 Power	 Power
 Open/Close	 Eject / Surround
 OSD	 Display / Media
 1	 1
 2	 2
 3	 3
 V-Mode	 Picture / Format
 4	 4
 5	 5
 6	 6
 P/N	 Text / Goto
 7	 7
 8	 8
 9	 9
 Program	 TV/Radio /
 0	 0
 10+	 Guide / EPG / -/--

Original	Replacement
 Search	 Red / Netflix / Search
 Setup	 Setup / OPT /
 Menu	 Menu / Home
 Title	 Sound / Title
 Subtitle	 Subtitle / EQ
 Angle	 Info / Angle
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 PBC	 Smart / List
 USB/Card	 AV / Input / RDS
 Zoom	 Zoom / Size
 <<	 << / Tune-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze





Original	Replacement
I<<	I<< / Preset-
>>	>> / Tune+
Stop	Stop / Hold
>>I	>>I / Preset+
AUDIO	LANG I/II AUDIO
SLOW-B	CH PAGE -
SLOW-F	+ CH PAGE
RETURN	RETURN BACK
L/R	TOP MENU D.MENU
A-B	YouTube REPEAT A-B
STEP	SHIFT + STEP-FREEZE Pause / Step /
+ VOL	+ VOL
MUTE	DIMMER MUTE
REPEAT	APP REPEAT
SHUFFLE	Prime Video RANDOM
- VOL	- VOL

Original	Replacement

