



Original		Replacement		Original		Replacement	
	Power		Power		0		0
	Mute		Mute		-/--		Guide
	Display		Shift + Info		Return		Back
	P.Mode		Shift + Format		DTV/DR		TV/R
	Title		Shift + Smart		Info		Info
	ST/MO		Dual		FAV		Pre Ch
	P.Size		Format		EPG		Shift + Guide
	Subtitle		Subt		Audio		Shift + Dual
	1		1		Tv/AV		AV
	2		2		CH+		Ch +
	3		3		CH-		Ch -
	4		4		Vol+		Vol +
	5		5		Vol-		Vol -
	6		6		Tv Setup		Smart
	7		7		DVB Menu		Menu
	8		8		DVD Setup		Media
	9		9		Eject		Eject





Original		Replacement		Original		Replacement	
	Up		Up		Play		Play
	Down		Down		Pause		Pause
	Right		Right		<<		<<
	Left		Left		>>		>>
	Enter		Ok		Stop		Stop
	Text		Text		I<<		I<<
	Hold		Options		>>I		>>I
	Index		List		Slow/Step		Shift + Media
	Cancel		Shift + Exit		Goto		Shift + Text
	Reveal		D. Menu		Angle		Exit
	Mix		Sleep		Zoom		Shift + Eject
	Sub Page		Shift + Subt				
	Size		3D				
	Red/Program		Red				
	Green/Intro		Green				
	Yellow/Repeat		Yellow				
	Blue/A-B		Blue				

