





 

 















 

























 





 









 





Original	Replacement	Original	Replacement
 Standby	 Power	 0	 0
 Open/Close	 Eject / Surround	 Title	 Sound / Title
 Audio	 Audio / Lang I/II	 Up	 Up
 1	 1	 Menu	 Menu / Home
 2	 2	 Left	 Left
 3	 3	 OK	 OK
 Angle	 Info / Angle	 Right	 Right
 4	 4	 Display	 Display / Media
 5	 5	 Down	 Down
 6	 6	 Video Out	 AV / Input / RDS
 Subtitle	 Subtitle / EQ	 Return	 Back / Return
 7	 7	 Setup	 Setup / OPT /
 8	 8	 Mode	 D.Menu / Top
 9	 9	 Vol+	 Vol+
 Search	 Red / Netflix / Search	 Mute	 Mute / Dimmer
 PRG	 TV/Radio /	 Mark	 Fav / Marker / PC
 CLR	 Exit / Cancel / Clear	 Zoom	 Zoom / Size





Original	Replacement
 Vol-	 Vol-
 A-B	 Yellow / YouTube / Repeat
 SlowR	 CH- / Page-
 SlowF	 CH+ / Page+
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Stop	 Stop / Hold
 Pause/Step	 Pause / Step / Freeze
 Play	 Play / Slow

Original	Replacement

