




Original		Replacement		Original		Replacement	
	Power		Power		CH+		CH+ / Page+
	Mute		Mute / Dimmer		CH-		CH- / Page-
	1		1		≡		D.Menu / Top
	2		2		Input		AV / Input / RDS
	3		3		Smart Colors		Display / Media
	4		4		Up		Up
	5		5		Down		Down
	6		6		Right		Right
	7		7		Left		Left
	8		8		OK		OK
	9		9		Back		Back / Return
	0		0		Exit		Exit / Cancel / Clear
	EPG		Guide / EPG / -/-		Red		Red / Netflix / Search
	Rec		Rec / Rec Mode		Home		Menu / Home
	Info		Info / Angle		Green		Green / APP / Repeat
	Vol+		Vol+		Yellow		Yellow / YouTube / Repeat
	Vol-		Vol-		Blue		Blue / Prime Video / Random





Original	Replacement	Original	Replacement
 <<	 << / Tune-		
 >>	 >> / Tune+		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		
 Subt	 Subtitle / EQ		
 Audio	 Audio / Lang I/II		
 TXT	 Text / Goto		
 Netflix	 Shift + Red / Netflix /		
 YouTube	 Shift + Yellow / YouTube /		
 prime video	 Shift + Blue / Prime		
 Google Play	 Shift + Green / APP /		

