





 
 

 


 
 

 

 
 
 



 


 
 




 


 



 


 
 
 
 
 

 
 






 
 






 
 



 




Original	Replacement	Original	Replacement
 Power	 Power	 Green	 Green
 Input	 AV	 Yellow	 Yellow
 Digital/Analog	 TV/R	 Blue	 Blue
 Sync Menu	 Menu	 Netflix	 Media
 1	 1	 [i+]/[?]	 Info
 2	 2	 Home	 Smart
 3	 3	 Sleep	 Sleep
 4	 4	 Guide	 Guide
 5	 5	 Return	 Back
 6	 6	 Options	 Options
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Right	 Right
 0	 0	 Left	 Left
 Exit	 Exit	 OK	 Ok
 [≡]/Text	 Text	 Vol+	 Vol +
 Red	 Red	 Vol-	 Vol -





	Original	Replacement	Original	Replacement
	Mute	 Mute		
	PR+	 Ch +		
	PR-	 Ch -		
	Recall	 Pre Ch		
	[...]	 Subt		
	Audio	 Dual		
	Title List	 List		
	<<	 <<		
	Play	 Play		
	>>	 >>		
	I<<	 I<<		
	Pause	 Pause		
	>>I	 >>I		
	Rec	 Rec		
	Stop	 Stop		
	[+]	 3D		

