





 





 
 



 





 







	Original	Replacement		Original	Replacement
	TV Power	 Power		Aspect	 Format
	Input	 AV		Hold	 Shift + Stop
	A / B	 Dual		Red	 Red
	1	 1		Green	 Green
	2	 2		Yellow	 Yellow
	3	 3		Blue	 Blue
	4	 4		Guide	 Guide
	5	 5		i+	 Info
	6	 6		Up	 Up
	7	 7		Left	 Left
	8	 8		OK	 Ok
	9	 9		Right	 Right
	0	 0		Down	 Down
	Text	 Text		Return	 Back
	Recall	 Pre Ch		Menu	 Menu
	Analog	 Shift + TV/R		Tools	 Options
	Digital	 TV/R		<< / < / <	 <<



 

 
 

 

 







 



 

 

 


 
 



 


 
 
 


 
 
 



 
 
 

 



 
 









Original		Replacement		Original		Replacement	
	Play		Play				
	>> / I> / II>		>>				
	Pause		Pause				
	Stop		Stop				
	Mute		Mute				
	Vol +		Vol +				
	Vol -		Vol -				
	Prog +		Ch +				
	Prog -		Ch -				
	Rec		Rec				



 
 

 



 

 

 
 
 

 
 
 

 



 



 




 







 















 


 


 







Original	Replacement	Original	Replacement
 Power	 Power	 Down	 Down
 1	 1	 Return	 Back
 2	 2	 I<<	 I<<
 3	 3	 >>I	 >>I
 4	 4	 <<	 <<
 5	 5	 Play	 Play
 6	 6	 >>	 >>
 7	 7	 Pause	 Pause
 8	 8	 Stop	 Stop
 9	 9	 Prog+	 Ch +
 0	 0	 Prog-	 Ch -
 Recall	 Pre Ch	 Rec	 Rec
 [i+]/[?]	 Info	 DVD Top Menu	 Menu
 Up	 Up	 DVD Menu	 D. Menu
 Left	 Left		
 OK	 Ok		
 Right	 Right		




 




Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[i+]		Info
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Return		Back
	Tools		Options
	Menu		Menu
	I<<		I<<
	←		Ch -
	→		Ch +
	>>I		>>I
	<<		<<
	Play		Play
	>>		>>
	Pause		Pause
	Stop		Stop






 

 

 

 

 

 
 


 
 
 

 

 


 
 





 

 
 
 

 

 

 







 

 

 
 
 



 








Original	Replacement	Original	Replacement
 DVD Top Menu	 Shift + Menu		
 DVD Menu	 D. Menu		










Original	Replacement	Original	Replacement
	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	Recall		Pre Ch
	[i+]/[?]		Info
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Return		Back
	Menu		Menu
	I<<		I<<
	Ch -		Ch -
	Ch +		Ch +
	>>I		>>I
	<<		<<
	Play		Play
	>>		>>
	Pause		Pause
	Stop		Stop
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -





Original	Replacement	Original	Replacement
 DVD Top Menu	 +  Shift + Menu		
 DVD Menu	 D.MENU D. Menu		

