




 
 






 

 



 

 

 
 
 

 
 









Original	Replacement	Original	Replacement
 Power	 Power	 System Menu	 Menu
 Theatre	 Smart	 1	 1
 One-Touch Play	 Shift + Play	 2	 2
 Sleep	 Sleep	 3	 3
 S-Air Mode	 Red	 4	 4
 TV Input	 AV	 5	 5
 Picture Navi	 Media	 6	 6
 Dimmer	 Shift + Mute	 7	 7
 Display	 Info	 8	 8
 Function+	 Ch +	 9	 9
 Function-	 Ch -	 0	 0
 Audio	 Dual	 Clear	 Exit
 Subtitle /	 Subt	 Folder-	 Shift + Ch -
 Angle / Memory Select	 Format	 Folder+	 Shift + Ch +
 Sound Mode	 Shift + Dual	 DVD Menu	 D. Menu
 Dynamic Bass	 Green	 DVD Top Menu	 Shift + Menu
 Night	 Yellow	 Muting	 Mute







Original	Replacement	Original	Replacement
	TV Power		Power
	Menu		Menu
	TV Enter		Ok
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Volume+		Vol +
	Volume-		Vol -
	Prog+		Ch +

