
 









 
 

 



 




 
 

 
 
 

 

 





 
 



 









 






 

 
 





 



Original	Replacement	Original	Replacement
Power ON/Off	 Power	CD Play	 Play
Tape 1 Stop	 Down	Volume-	 Vol -
Input/Source	 AV	CD Rewind	 <<
Preset Pause	 +  Shift + Pause	Stop	 Stop
Vol Rs-/Effect	 Ch -	Prev./Prog-	 <<
Tape 2 Pre./eq	 Green	Pr 1	 1
Funct./Direct	 Yellow	CD Pause	 Pause
Vol Rs+/S.Mode	 Ch +	Pr 2	 2
Sleep	 Sleep	Pr 3	 3
Next/Prog+	 >>	Pr 4	 4
CD/Theater	 Smart	Pr 5	 5
Tape 1 Hall/Ats	 Red	Pr 6	 6
CD Random	 TV/R	Pr 7	 7
Repeat	 Text	Mode	 Options
Display	 Info	Pr 8	 8
CD F.FWD	 >>	Pr 9	 9
Volume+	 Vol +	Pr 0/10	 0



Original	Replacement	Original	Replacement
Program	 +  Shift + Sleep		
Disc 5	 +  Shift + 5		
Tape 1 Rew	 Left		
Center	 Media		
Fm Mode/Disc	 List		
Clear	 +  Shift + 9		
Tape 1 Play	 Ok		
Tape 1 F.FWD	 Right		
Disc 1 Eject	 +  Shift + 1		
Disc 3 Eject	 +  Shift + 3		
Disc 4 Eject	 +  Shift + 4		
Disc 2	 +  Shift + 2		


 


 



 
 
 
 

 
 
 

 

 



 

 

 


 

 
 


Original	Replacement	Original	Replacement
Power ON/Off	 Power	CD F.FWD	 >>
Mute	 Mute	Funct./Direct	 Exit
Vol Rs-/Effect	 Subt	CD Pause	 Pause
Every Pop	 Options	Woofer/Speed	 Back
Tape 1 Preset	 List	Volume+	 Vol +
Tape 1 Stop	 +  Shift + Stop	Next/Prog+	 Ch +
Preset Pause	 +  Shift + Pause	Volume-	 Vol -
Sleep	 Sleep	Tape 1 Hall/Ats	 Media
CD Random	 TV/R	Prev./Prog-	 Ch -
Tape 2 Pre./eq	 D. Menu	Pr 1	 1
Repeat	 Text	Pr 2	 2
Vol Rs+/S.Mode	 Eject	Pr 3	 3
Input/Source	 AV	Pr 4	 4
CD/Theater	 Menu	Pr 5	 5
CD Play	 Play	Pr 6	 6
CD Rewind	 <<	Pr 7	 7
Stop	 Stop	Pr 8	 8



Original	Replacement	Original	Replacement
Pr 9	 9	Disc 1 Eject	 +  Shift + 1
Mode	 Guide	Disc 2	 +  Shift + 2
Pr 0/10	 0	Disc 3 Eject	 +  Shift + 3
Program	 Pre Ch	Disc 4 Eject	 +  Shift + 4
Tape 1 Rec	 +  Shift + Rec	Disc 5	 +  Shift + 5
Tape 1 Rew	 +  Shift + <<	6 Ch/Geq	 +  Shift + 6
ON/Off	 +  Shift + Power	Mark/Delete	 +  Shift + 7
Tape 1 Play	 +  Shift + Play	Erase/Snooze	 +  Shift + 8
Tape 1 F.FWD	 +  Shift + >>	Clear	 +  Shift + 9
Intro	 +  Shift + TV/R	Dimmer	 +  Shift + 0
Band	 +  Shift + D. Menu	Space/Default 3D	 +  Shift + Pre Ch
Edit	 +  Shift + Text		
Fm Mode/Disc	 +  Shift + Menu		
Tuner/Bypass	 +  Shift + Exit		
Index+/Vol Ls+	 +  Shift + Ch +		
Phono/Scan	 +  Shift + Media		
Index-/Vol Ls-	 +  Shift + Ch -		






 
 








 
 



 
 
 
 





 


 



 
Original	Replacement	Original	Replacement
Power ON/Off		Power	
Mute		Mute	
Tape 1 Stop		Stop	
Every Pop		Options	
Tape 1 Preset		List	
Vol Rs-/Effect		Subt	
Sleep		Sleep	
Preset Pause		Pause	
CD Random		TV/R	
Tape 2 Pre./eq		D. Menu	
Repeat		Text	
Vol Rs+/S.Mode		Eject	
Input/Source		AV	
CD/Theater		Menu	
CD Play		Up	
CD Rewind		Left	
Stop		Ok	
CD F.FWD		Right	
CD Pause		Down	
Woofer/Speed		Back	
Volume+		Vol +	
Next/Prog+		Ch +	
Volume-		Vol -	
Tape 1 Hall/Ats		Media	
Prev./Prog-		Ch -	
Pr 1		1	
Pr 2		2	
Pr 3		3	
Pr 4		4	
Pr 5		5	
Pr 6		6	
Pr 7		7	
Pr 8		8	
Pr 9		9	




 
 


Original	Replacement	Original	Replacement
Mode	 Guide	Disc 3 Eject	 +  Shift + 3
Pr 0/10	 0	Disc 4 Eject	 +  Shift + 4
Program	 Pre Ch	Disc 5	 +  Shift + 5
ON/Off	 +  Shift + Power	6 Ch/Geq	 +  Shift + 6
Classic Track	 +  Shift + Sleep	Mark/Delete	 +  Shift + 7
Tape 1 Rew	 <<	Erase/Snooze	 +  Shift + 8
Tape 1 Play	 Play	Clear	 +  Shift + 9
Tape 1 F.FWD	 >>	+10/Next Sv+V	 +  Shift + Guide
Intro	 +  Shift + TV/R	Dimmer	 +  Shift + 0
Band	 +  Shift + D. Menu	Space/Default 3D	 +  Shift + Pre Ch
Edit	 +  Shift + Text		
Aux/Video	 +  Shift + AV		
Index+/Vol Ls+	 +  Shift + Ch +		
Phono/Scan	 +  Shift + Media		
Index-/Vol Ls-	 +  Shift + Ch -		
Disc 1 Eject	 +  Shift + 1		
Disc 2	 +  Shift + 2		



Eject/2.1CH

Original	Replacement	Original	Replacement
Power ON/Off	 Power	CD F.FWD	 Right
Mute	 Mute	Funct./Direct	 Exit
Every Pop	 Play	Woofer/Speed	 Back
Tape 1 Preset	 Pause	Volume+	 Vol +
Tape 1 Stop	 Stop	Next/Prog+	 Ch +
Preset Pause	 +  Shift + Pause	Volume-	 Vol -
Vol Rs-/Effect	 Subt	Tape 1 Hall/Ats	 Media
Sleep	 Sleep	Prev./Prog-	 Ch -
CD Random	 TV/R	Pr 1	 1
Tape 2 Pre./eq	 D. Menu	Pr 2	 2
Repeat	 Text	Pr 3	 3
Vol Rs+/S.Mode	 Eject	Pr 4	 4
Input/Source	 AV	Pr 5	 5
CD/Theater	 Menu	Pr 6	 6
Display	 Info	Pr 7	 7
CD Rewind	 Left	Pr 8	 8
Stop	 Ok	Pr 9	 9



Original	Replacement	Original	Replacement
Mode	 Guide		
Pr 0/10	 0		
Program	 Pre Ch		
ON/Off	 +  Shift + Power		

