 


Original	Replacement
Open/Close	Eject / Surround
Power	Power
Stereo/Mono	Shift + Audio / Lang I/II
Name	Text / Goto
Dimmer	Shift + Mute / Dimmer
Repeat	Green / APP / Repeat
Tv/Video	AV / Input / RDS
Clear	Exit / Cancel / Clear
Memory	Rec / Rec Mode
Time	Sleep / Timer
Muting	Mute / Dimmer
Play Mode	Shift + Play /
1	1
2	2
3	3
Function	Smart / List
Audio	Audio / Lang I/II


Original	Replacement
4	4
5	5
6	6
Band	TV/Radio /
Angle	Info / Angle
7	7
8	8
9	9
Sound Field	Sound / Title
Subtitle	Subtitle / EQ
>10 button"/> >10	Guide / EPG / -/-
10/0	0
Enter	Fav / Marker / PC
Display	Display / Media
Vol+	Vol+
Vol-	Vol-
I<</Preset-	I<< / Preset-

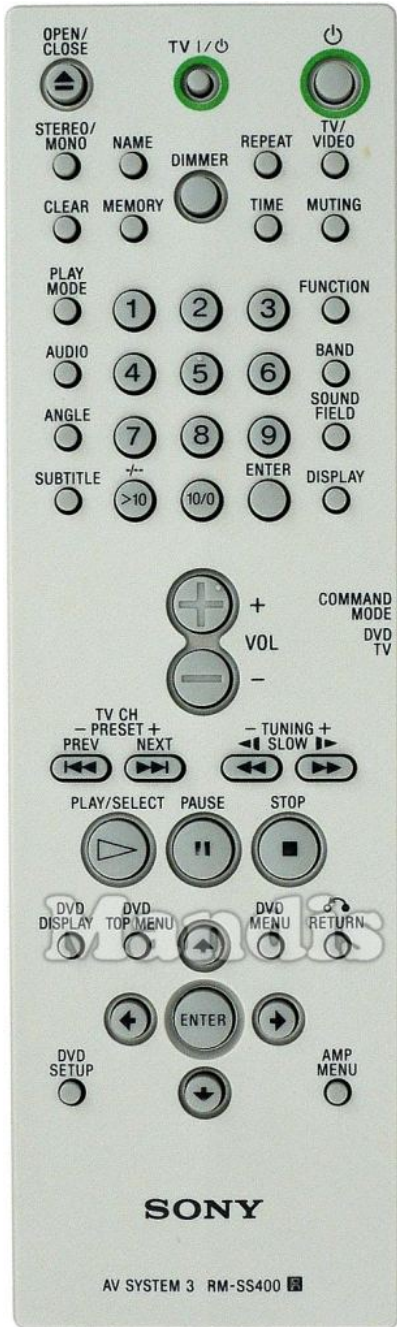



	Original	Replacement	Original	Replacement
	>>I/Preset+	 >>I / Preset+		
	<</Tuning-/<I	 << / Tune-		
	Tuning+/Slow	 >> / Tune+		
	Play/Select	 Play / Slow		
	Pause	 Pause / Step / Freeze		
	Stop	 Stop / Hold		
	DVD Display	 Shift + Display / Media		
	DVD Top Menu	 Shift + D.Menu / Top Menu		
	Up	 Up		
	DVD Menu	 D.Menu / Top		
	Return	 Back / Return		
	Left	 Left		
	Enter	 OK		
	Right	 Right		
	DVD Setup	 Setup / OPT /		
	Down	 Down		
	AMP Menu	 Menu / Home		



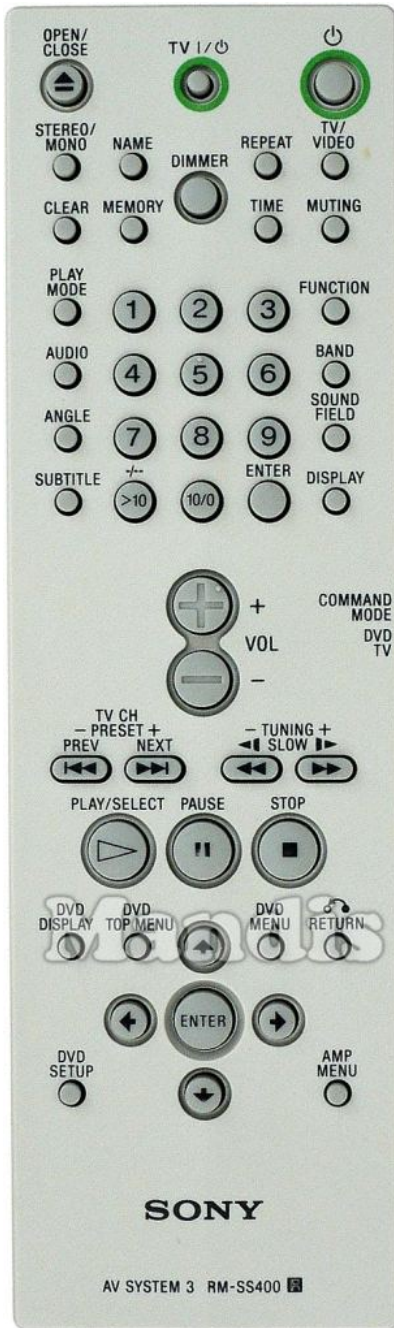 

	Original	Replacement
	Power Tv	Power
	Stereo/Mono	Audio / Lang I/II
	Tv/Video	AV / Input / RDS
	Memory	Rec / Rec Mode
	Muting	Mute / Dimmer
	1	1
	2	2
	3	3
	Function	Smart / List
	4	4
	5	5
	6	6
	Band	TV/Radio /
	7	7
	8	8
	9	9
	Sound Field	Sound / Title

	Original	Replacement
	>10	Guide / EPG / -/--
	10/0	0
	Display	Display / Media
	Vol+	Vol+
	Vol-	Vol-
	Tv CH-	CH- / Page-
	Tv CH+	CH+ / Page+
	Enter	OK
	AMP Menu	Menu / Home

