 



Original	Replacement	Original	Replacement
	Power		Power
	Sleep		Sleep
	Play Mode		Shift + Play
	Tv/Video		TV/R
	Repeat Mode		Text
	Menu		Smart
	Display		Info
	Muting		Mute
	Auto Format		List
	Night Mode		AV
	Clear		Exit
	Audio		Dual
	Angle		Red
	Subtitle		Subt
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10/0		0
	>10 / -/--		Guide
	Enter		Pre Ch
	Sound Field+		Ch +
	Sound Field-		Ch -
	Function		Media
	Tuner Band		Format
	Vol+		Vol +
	Vol-		Vol -
	I<</Preset-		I<<
	>>I/Preset+		>>I

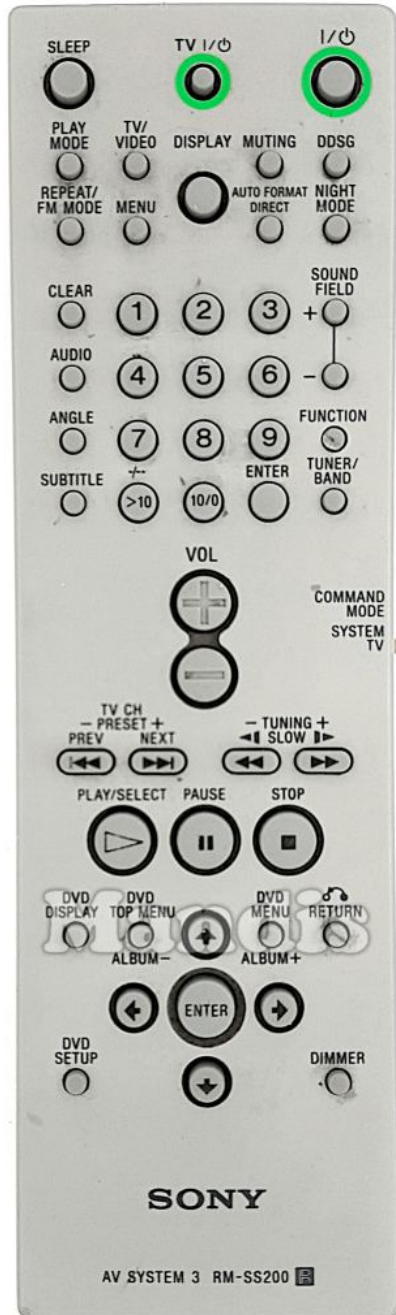



	Original	Replacement	Original	Replacement
	<</>I Slow/Tune-		<<	
	Tuning+/Slow		>>	
	Play		Play	
	Pause		Pause	
	Stop		Stop	
	DVD Display		Shift + Info	
	DVD Top		Menu	
	DVD Menu /		D. Menu	
	Return		Back	
	Up		Up	
	Left		Left	
	Enter		Ok	
	Right		Right	
	Down		Down	
	DVD Setup		Options	
	Dimmer		Blue	



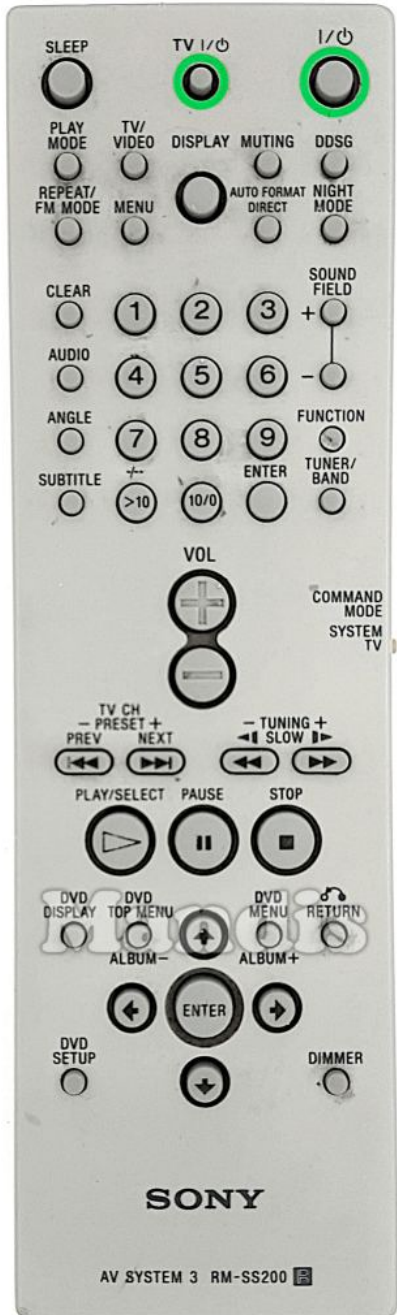 

	Original	Replacement	Original	Replacement
	Power			
	1			
	2			
	3			
	4			
	5			
	6			
	7			
	8			
	9			
	0			
	-/--			
	TV Vol+			
	TV Vol-			
	TV CH+			
	TV CH-			
	Tv/Video			

