



| Original | Replacement |
|--|---|
|  Power |  Power |
|  Function |  Menu |
|  Sleep |  Sleep |
|  Play CD |  Play |
|  Tuner/Band |  Green |
|  <> Deck A |  Yellow |
|  <> Deck B |  Blue |
|  D.Skip |  Options |
|  Check |  Text |
|  Clear |  Exit |
|  Dimmer |  Smart |
|  I<</Tuning- |  I<< |
|  >>/I/Tuning+ |  >>I |
|  Stop |  Stop |
|  << |  << |
|  >> |  >> |
|  Pause |  Pause |

| Original | Replacement |
|---|--|
|  Up |  Up |
|  Down |  Down |
|  Right |  Right |
|  Left |  Left |
|  Enter |  Ok |
|  Play MD |  Shift + Play |
|  Stop MD |  Shift + Stop |
|  GEQ |  Dual |
|  P File |  Subt |
|  Effect |  TV/R |
|  Pro Logic |  3D |
|  T Tone |  Media |
|  DSP |  Info |
|  Volume+ |  Vol + |
|  Volume- |  Vol - |
|  Rear+ |  Ch + |
|  Rear- |  Ch - |





| Original | | Replacement | |
|----------|-----------------|-------------|---------|
| | Center+ | | 2 |
| | Center- | | 5 |
| | Clock/Timer/SET | | D. Menu |
| | Timer/Select | | AV |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

| Original | | Replacement | |
|----------|--|-------------|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

