

 



 





 

 



 





 

 



 





































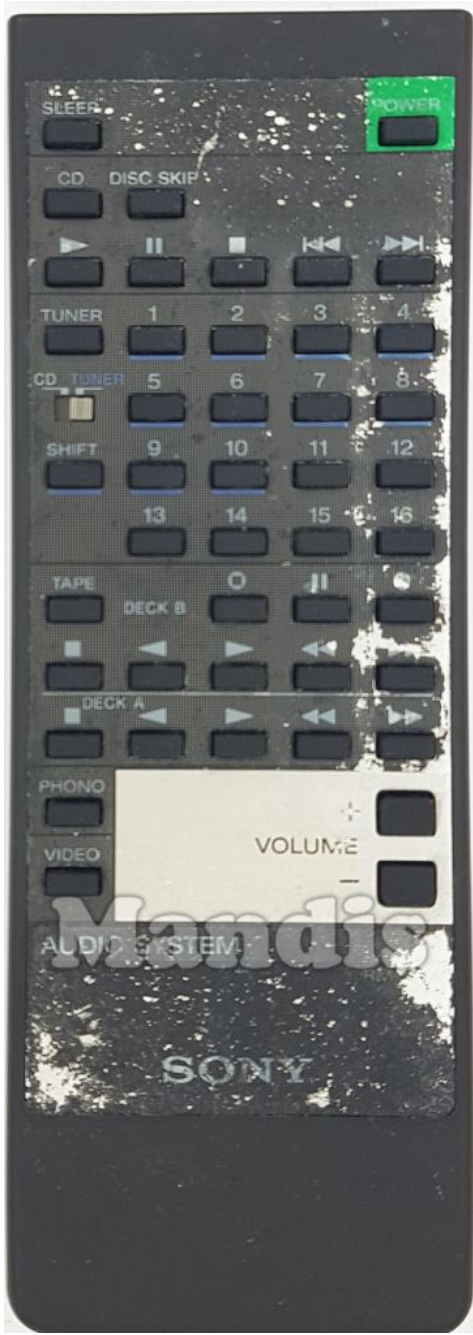










Original	Replacement	Original	Replacement
 Power	 Power	 3 Tuner	 3
 Sleep	 Sleep / Timer	 4 Tuner	 4
 Phono	 Red / Netflix / Search	 5 Tuner	 5
 Video	 Blue / Prime Video / Random	 6 Tuner	 6
 Tape	 Green / APP / Repeat	 7 Tuner	 7
 Tuner	 TV/Radio /	 8 Tuner	 8
 CD	 Yellow / YouTube / Repeat	 9 Tuner	 9
 Volume+	 Vol+	 10 Tuner	 0
 Volume-	 Vol-	 Shift	 Smart / List
 Disc Skip	 Zoom / Size	 1 CD	 Shift + 1
 Play CD	 Play / Slow	 2 CD	 Shift + 2
 Pause CD	 Pause / Step / Freeze	 3 CD	 Shift + 3
 Stop CD	 Stop / Hold	 4 CD	 Shift + 4
 I<< CD	 I<< / Preset-	 5 CD	 Shift + 5
 >>I CD	 >>I / Preset+	 6 CD	 Shift + 6
 1 Tuner	 1	 7 CD	 Shift + 7
 2 Tuner	 2	 8 CD	 Shift + 8





	Original	Replacement
	9 CD	 +  Shift + 9
	10 CD	 +  Shift + 0
	11 CD	 Guide / EPG / /-/-
	12 CD	 Fav / Marker / PC
	13 CD	 +  Shift + Guide / EPG / /-/-
	14 CD	 +  Shift + Fav / Marker / PC
	15 CD	 Display / Media
	16 CD	 +  Shift + Display / Media
	Stop Deck A	 +  Shift + Stop /
	<< Deck A	 << / Tune-
	>> Deck A	 >> / Tune+
	> Deck A	 Right
	< Deck A	 Left
	Pause Deck B	 +  Shift + Pause / Step /
	Rec Pause Deck B	 +  Shift + Rec / Rec Mode
	Rec Deck B	 Rec / Rec Mode
	Stop Deck B	 OK

	Original	Replacement
	> Deck B	 Up
	< Deck B	 Down
	<< Deck B	 CH- / Page-
	>> Deck B	 CH+ / Page+

