



 




 
 
 

 
 

 

 

 



 



 









Original	Replacement
 Power	 Power
 Open/Close	 Text / Goto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit / Cancel / Clear
 Enter	 Fav / Marker / PC
 Time/Text	 Setup / OPT /
 Picture Mode	 Sleep / Timer
 Audio	 Audio / Lang I/II

Original	Replacement
 Subtitle	 Subtitle / EQ
 Angle	 Red / Netflix / Search
 Sur	 Eject / Surround
 Search Mode	 AV / Input / RDS
 Repeat	 Shift + Setup / OPT / Tools
 A-B	 Shift + Play /
 Shuffle	 Yellow / YouTube / Repeat
 SA-CD	 Smart / List
 Album+	 CH+ / Page+
 Album-	 CH- / Page-
 Zoom	 Shift + Text /
 Picture Navi	 Zoom / Size
 >>	 >>  / Preset+
  <<	 << / Tune-
 >> /  >	  << / Preset-
 << / <	 >> / Tune+
 ← / <	 Shift + << /

Tune-





