
 
 




 






 


 










Original	Replacement	Original	Replacement
 Power	 Power	 Display/Tools	 Setup / OPT /
 Muting	 Mute / Dimmer	 One -Touch Play	 Text / Goto
 Play	 Play / Slow	 Menu/DVD	 Menu / Home
 Pause	 Pause / Step / Freeze	 Theatre	 TV/Radio /
 Stop	 Stop / Hold	 Up	 Up
 <<	 << / Tune-	 Angle	 Info / Angle
 >>	 >> / Tune+	 Left	 Left
 I<</Preset-	 I<< / Preset-	 OK	 OK
 >>I/Preset+	 >>I / Preset+	 Right	 Right
 Sound Mode	 Sound / Title	 Clear	 Exit / Cancel / Clear
 Audio	 Audio / Lang I/II	 Down	 Down
 Subtitle/D.Tuning	 Subtitle / EQ	 Return	 Back / Return
 Picture Navi	 Picture / Format	 Volume+	 Vol+
 S-Air Mode	 Zoom / Size	 Dynamic Bass	 Smart / List
 Sleep	 Sleep / Timer	 Function+	 CH+ / Page+
 Tv Input	 AV / Input / RDS	 Volume-	 Vol-
 System	 D.Menu / Top	 Display	 Display / Media


 
 

Menu/Enter

Menu






 



Original	Replacement	Original	Replacement
	Function-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Night		Red / Netflix / Search
	DVD Top Menu		Green / APP / Repeat
	Disc Skip		Blue / Prime Video / Random
	Power Tv		Shift + Power
	Tv Vol-		Shift + Vol-
	Tv Vol+		Shift + Vol+

Original	Replacement	Original	Replacement
	→/ > Step/Advance		Shift + >> /
	←/ < Step/Replay		Shift + << /





Original	Replacement
 Power	 Power
 Tv Vol+	 Vol+
 Tv Input	 AV / Input / RDS
 Tv Vol-	 Vol-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Guide / EPG / -/--
 0	 0
 Enter	 Fav / Marker / PC
 Menu	 Menu / Home

Original	Replacement
 Muting	 Mute / Dimmer
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Tools	 Setup / OPT /
 Prog-	 CH- / Page-
 Prog+	 CH+ / Page+

