



 
 
 
 

 

 



 



 


 

 

 

 
 

 

 

 

 





 
 

 
 
 

 









 

 





Original	Replacement
 Tv Input	 AV / Input / RDS
 One Touch Play	 Exit / Cancel / Clear
 Power Tv	 +  Shift + Power
 Power	 Power
 DVD/CD	 Red / Netflix / Search
 1	 1
 FM	 Green / APP / Repeat
 2	 2
 USB	 +  Shift + 8
 3	 3
 Tv/Cable	 Blue / Prime Video / Random
 4	 4
 Audio In	 Guide / EPG / -/--
 5	 5
 Function	 Fav / Marker / PC
 6	 6
 Repeat	 Back / Return

Original	Replacement
 7	 7
 Surround	 Eject / Surround
 8	 8
 EQ	 +  Shift + Subtitle / EQ
 9	 9
 Audio	 Audio / Lang I/II
 Program	 TV/Radio /
 Subtitle	 Subtitle / EQ
 0	 0
 Angle	 Info / Angle
 Sleep	 Sleep / Timer
 DVD Top Menu	 +  Shift + Display / Media
 DVD Menu	 D.Menu / Top
 Muting	 Mute / Dimmer
 Up	 Up
 Left	 Left
 OK	 OK





Original	Replacement
 Right	 Right
 Vol+	 Vol+
 Setup	 Setup / OPT /
 Down	 Down
 Display	 Display / Media
 Time	 +  Shift + Sleep / Timer
 Vol-	 Vol-
 I<</Preset-	 I<< / Preset-
 Pause	 Pause / Step / Freeze
 >>I/Preset+	 >>I / Preset+
 <</Tuning-	 << / Tune-
 Play	 Play / Slow
 >>/Tuning+	 >> / Tune+
 Stop	 Stop / Hold

Original	Replacement

