














 
 







 
 
 






 















Original	Replacement
 Open/Close	 Eject / Surround
 Display	 Display / Media
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Wide Mode	 Zoom / Size
 Tv/Video	 TV/Radio /
 -/--/Search Mode	 Guide / EPG / -/--
 0	 0
 Clear	 Exit / Cancel / Clear

Original	Replacement
 Time	 Sleep / Timer
 Red/Shuffle	 Red / Netflix / Search
 Green/Program	 Green / APP / Repeat
 Repeat	 Shift + Green / APP / Repeat
 A-B	 Shift + Yellow / YouTube / Repeat A-B
 Yellow/Audio	 Yellow / YouTube / Repeat
 Blue/Angle	 Blue / Prime Video / Random
 [=]/Subtitle	 Text / Goto
 Subtitle On/Off	 Subtitle / EQ
 AV Center	 AV / Input / RDS
 < I Step	 Shift + Left
 Step II>	 Shift + Right
 <I Slow	 CH- / Page-
 Slow I>	 CH+ / Page+
 AV Vol+	 Vol+
 I<</Prev	 I<< / Preset-
 >>I/Next	 >>I / Preset+



