



Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Reset	 Guide / EPG / -/--
 0 / AV PC	 0
 RTN	 Back / Return
 Display	 Display / Media
 Up / P+	 Up
 Up / P+	 CH+ / Page+
 Input	 AV / Input / RDS

Original	Replacement
 Left / V-	 Left
 Left / V-	 Vol-
 Menu / Enter	 Menu / Home
 Menu / Enter	 OK
 Right / V+	 Right
 Right / V+	 Vol+
 ARC	 Info / Angle
 Down / P-	 Down
 Down / P-	 CH- / Page-
 Exit	 Exit / Cancel / Clear
 Text	 Text / Goto
 Text Subcode	 Subtitle / EQ
 PIP Up	 Shift + Up
 PIP Position	 Shift + Left
 PIP On/Off	 Shift + OK
 PIP Size	 Shift + Right
 PIP Down	 Shift + Down





Original	Replacement	Original	Replacement
 Text Reveal	 Play / Slow		
 Text Index	 Smart / List		
 Text Hold	 Stop / Hold		
 Text Cancel	 Rec / Rec Mode		
 Text Size	 Zoom / Size		
 Green / MUP	 Green / APP / Repeat		
 Yellow / Pause	 Yellow / YouTube / Repeat		
 Yellow / Pause	 Pause / Step / Freeze		
 Blue / Audio	 Blue / Prime Video / Random		
 Blue / Audio	 Audio / Lang I/II		
 Red / Picture	 Red / Netflix / Search		
 Red / Picture	 Setup / OPT /		
 Sleep	 Sleep / Timer		
 Mute	 Mute / Dimmer		

Original	Replacement

