



| Original | Replacement | Original | Replacement |
|---|-------------|---|-----------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | DTV/ATV |  | D.Menu / Top |
|  | Recall |  | Back / Return |
|  | P.Mode |  | Picture / Format |
|  | S.Mode |  | Sound / Title |
|  | Sleep |  | Sleep / Timer |
|  | Menu |  | Menu / Home |
|  | Source |  | AV / Input / RDS |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Exit |  | Exit / Cancel / Clear |
|  | Display |  | Display / Media |
|  | Vol+ |  | Vol+ |
|  | Vol- |  | Vol- |
|  | MTS |  | Info / Angle |
|  | Rec List |  | Smart / List |
|  | CH+ |  | CH+ / Page+ |
|  | CH- |  | CH- / Page- |
|  | FAV/List |  | Fav / Marker / PC |
|  | Rec |  | Rec / Rec Mode |





| Original | Replacement |
|------------------------|-------------------------------|
| Freeze | Pause / Step / Freeze |
| Guide | Guide / EPG / -/- |
| << | << / Tune- |
| >> / Aspect | >> / Tune+ |
| >> / Aspect | Shift + Picture / Format |
| I<< / Cancel | I<< / Preset- |
| I<< / Cancel | Shift + Exit / Cancel / Clear |
| >>I / Sub.PG | >>I / Preset+ |
| Stop / Index | Stop / Hold |
| Play/Pause / Timeshift | Play / Slow |
| Tv/Radio | TV/Radio / |
| Subtitle | Subtitle / EQ |
| Reveal | Eject / Surround |
| Size | Zoom / Size |
| Hold | Shift + Stop / |
| Text | Text / Goto |
| Red | Red / Netflix / Search |

| Original | Replacement |
|----------|-----------------------------|
| Green | Green / APP / Repeat |
| Yellow | Yellow / YouTube / Repeat |
| Cyan | Blue / Prime Video / Random |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |





| Original | Replacement | Original | Replacement |
|---|-------------|---|-----------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | DTV/ATV |  | D.Menu / Top |
|  | Recall |  | Back / Return |
|  | P.Mode |  | Picture / Format |
|  | S.Mode |  | Sound / Title |
|  | Sleep |  | Sleep / Timer |
|  | Menu |  | Menu / Home |
|  | Source |  | AV / Input / RDS |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Exit |  | Exit / Cancel / Clear |
|  | Display |  | Display / Media |
|  | Vol+ |  | Vol+ |
|  | Vol- |  | Vol- |
|  | MTS |  | Info / Angle |
|  | Rec List |  | Smart / List |
|  | CH+ |  | CH+ / Page+ |
|  | CH- |  | CH- / Page- |
|  | FAV/List |  | Fav / Marker / PC |
|  | Rec |  | Rec / Rec Mode |





| Original | Replacement | Original | Replacement |
|--|---|--|---|
|  Freeze |  Pause / Step / Freeze |  Green |  Green / APP / Repeat |
|  Guide |  Guide / EPG / -/- |  Yellow |  Yellow / YouTube / Repeat |
|  << |  << / Tune- |  Cyan |  Blue / Prime Video / Random |
|  >> / Aspect |  >> / Tune+ | | |
|  >> / Aspect |  Shift + Picture / Format | | |
|  << / Cancel |  << / Preset- | | |
|  << / Cancel |  Shift + Exit / Cancel / Clear | | |
|  >> / Sub.PG |  >> / Preset+ | | |
|  Stop / Index |  Stop / Hold | | |
|  Play/Pause / Timeshift |  Play / Slow | | |
|  Tv/Radio |  TV/Radio / | | |
|  Subtitle |  Subtitle / EQ | | |
|  Reveal |  Eject / Surround | | |
|  Size |  Zoom / Size | | |
|  Hold |  Shift + Stop / | | |
|  Text |  Text / Goto | | |
|  Red |  Red / Netflix / Search | | |

