



| Original | Replacement |
|--|---|
|  Power |  Power |
|  Source |  AV / Input / RDS |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  TV |  TV/Radio / |
|  0 |  0 |
|  Recall |  Fav / Marker / PC |
|  V+ |  Vol+ |
|  Mute |  Mute / Dimmer |
|  P+ |  CH+ / Page+ |

| Original | Replacement |
|--|---|
|  V- |  Vol- |
|  World/Internet |  Smart / List |
|  P- |  CH- / Page- |
|  Menu |  Menu / Home |
|  Q.Menu |  D.Menu / Top |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Down |  Down |
|  Back |  Back / Return |
|  Exit |  Exit / Cancel / Clear |
|  i |  Info / Angle |
|  Music/Camera |  Display / Media |
|  TV Guide |  Guide / EPG / -/- |
|  */O |  Shift + 1 |
|  */Q |  Shift + 2 |





| Original | Replacement | Original | Replacement |
|--|---|----------|-------------|
|  [=]/Text |  GOTO TEXT Text / Goto | | |
|  Red |  NETFLIX SEARCH Red / Netflix / Search | | |
|  Green |  APP REPEAT Green / APP / Repeat | | |
|  Yellow |  YouTube REPEAT A-B Yellow / YouTube / Repeat | | |
|  Blue |  Prime Video RANDOM Blue / Prime Video / Random | | |
|  LANG. |  LANG I/II AUDIO Audio / Lang I/II | | |
|  [=].. |  TITLE SOUND Sound / Title | | |
|  [-O-] |  OPT-TOOLS SETUP Setup / OPT / | | |
|  << |  TUNE- << / Tune- | | |
|  |  STEP-FREEZE Pause / Step / Freeze | | |
|  >> |  TUNE+ >> / Tune+ | | |
|  Rec |  REC MODE Rec / Rec Mode | | |
|  ▶ |  SLOW ▶ Play / Slow | | |
|  ■ |  HOLD ■ Stop / Hold | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

