












 















 
 
 





Original	Replacement
 Power	 Power
 Source	 AV / Input / RDS
 Sleep	 Sleep / Timer
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/-- / +10	 Guide / EPG / -/--
 Recall	 Back / Return
 P-Mode	 Picture / Format

Original	Replacement
 S-Mode	 Sound / Title
 Nicam / Audio	 Audio / Lang I/II
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Red / Program	 Red / Netflix / Search
 Red / Program	 TV/Radio /
 Green / Goto	 Green / APP / Repeat
 Yellow / Angle	 Yellow / YouTube / Repeat
 Blue / USB/Card	 Blue / Prime Video / Random
 Subtitle	 Subtitle / EQ
 Info	 Info / Angle
 Menu / Exit	 Menu / Home
 Menu / Exit	 Exit / Cancel / Clear
 + / FAV+	 Vol+





Original	Replacement
Canales / Repeat	Display / Media
EPG /	+  Shift + Guide / EPG / -/-
EPG /	D.Menu / Top
- / FAV-	Vol-
FAV / AB	Fav / Marker / PC
Teletext / Eject	Eject / Surround
Teletext / Eject	Text / Goto
Play/Pause / Mix	Play / Slow
Play/Pause / Mix	Pause / Step / Freeze
Stop / Hold	Stop / Hold
DVD-Setup	Setup / OPT /
<< / Index	<< / Tune-
Up / P.Up	+  Shift + Up
>> / Size	>> / Tune+
Left / Cancel	+  Shift + Left
OK / Reveal	+  Shift + OK
Right / Clock	+  Shift + Right

Original	Replacement
I<< / TV/Radio	I<< / Preset-
Down / P.Down	+  Shift + Down
>>I / Subpage	>>I / Preset+

