



 
















Original	Replacement	Original	Replacement
 Power	 Power	 Rec	 Rec / Rec Mode
 Mute	 Mute / Dimmer	 PVR List	 Smart / List
 Red	 Red / Netflix / Search	 Menu	 Menu / Home
 Green	 Green / APP / Repeat	 Exit	 Exit / Cancel / Clear
 Yellow	 Yellow / YouTube / Repeat	 Up	 Up
 Blue/Timer	 Blue / Prime Video / Random	 Left	 Left
 Format	 Picture / Format	 OK	 OK
 Res.	 D.Menu / Top	 Right	 Right
 TTX	 Text / Goto	 Down	 Down
 S-T	 Setup / OPT /	 EPG	 Guide / EPG / -/-
 I<<	 I<< / Preset-	 Info	 Info / Angle
 >>I	 >>I / Preset+	 CH+ / Page+	 CH+ / Page+
 <<	 << / Tune-	 Tv/Rad	 TV/Radio /
 >>	 >> / Tune+	 Vol+	 Vol+
 Pause	 Pause / Step / Freeze	 CH- / Page-	 CH- / Page-
 Play	 Play / Slow	 Audio	 Audio / Lang I/II
 Stop	 Stop / Hold	 Vol-	 Vol-





Original		Replacement		Original		Replacement	
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	FAV		Fav / Marker / PC				
	0		0				
	Back		Back / Return				

