 


 




 




 

 




Original		Replacement		Original		Replacement	
	Power		Power		Sleep		Sleep
	Mute		Mute		Vol +		Vol +
	1		1		Vol -		Vol -
	2		2		Menu		Menu
	3		3		Exit		Exit
	4		4		Up		Up
	5		5		Left		Left
	6		6		Enter		Ok
	7		7		Right		Right
	8		8		Down		Down
	9		9		Source		AV
	0		0		EPG		Guide
	FAV		Pre Ch		Nicam		Options
	Recall		Back		P.Mode		Shift + Format
	CH +		Ch +		S.Mode		Shift + Dual
	CH -		Ch -		P.Size		Format
	Display		Info		Red / Goto		Red





Original	Replacement	Original	Replacement
 Green / Slow	 Green	 S.Title	 Subt
 Yellow / Repeat	 Yellow	 Audio	 Dual
 Yellow / Repeat	 Shift + Text	 Freeze	 Shift + Pause
 Blue / A-.B	 Blue	 Radio	 TV/R
 Media	 Media	 3D	 3D
 Play/Pause / Text	 Play		
 Play/Pause / Text	 Pause		
 Play/Pause / Text	 Text		
 Stop / Index	 Stop		
 Rec / PVR	 Rec		
 I<< / Hold	 I<<		
 >>I / Size	 >>I		
 << / S.Page	 <<		
 >> / Reveal	 >>		
 FAV +	 Shift + Up		
 FAV -	 Shift + Down		
 Auto	 Smart		

