



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV/Radio		TV/Radio /
	0		0
	Fav		Fav / Marker / PC
	Vol+		Vol+
	Reclist		Setup / OPT /
	Reclist		Shift + Smart / List

Original	Replacement	Original	Replacement
	CH+		CH+ / Page+
	Vol-		Vol-
	Guide		Guide / EPG / -/--
	CH-		CH- / Page-
	Rec		Rec / Rec Mode
	MTS		Smart / List
	Aspect		Picture / Format
	Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Display		Display / Media
	Red		Red / Netflix / Search





Original	Replacement
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Cyan	 Blue / Prime Video / Random
 << / Index	 << / Tune-
 >> / TTX	 Text / Goto
 >> / TTX	 >> / Tune+
 I<< / Sub.Pg	 I<< / Preset-
 >>I / Reveal	 >>I / Preset+
 Stop / Hold	 Stop / Hold
 Play/Pause /	 +  Shift + Exit / Cancel / Clear
 Play/Pause /	 Play / Slow
 Size	 Zoom / Size
 Subtitle	 Subtitle / EQ

Original	Replacement

