




 

Original	Replacement
	Power
	Mute / Dimmer
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Back / Return
	Vol+
	Audio / Lang / I/II
	Exit / Cancel / Clear

Original	Replacement
	CH+ / Page+
	Vol-
	CH- / Page-
	Up
	Left
	OK
	Right
	Shift + D.Menu / Top Menu
	Down
	D.Menu / Top
	AV / Input / RDS
	Picture / Format
	Sound / Title
	Sleep / Timer
	Info / Angle
	Zoom / Size
	TV/Radio /





Original	Replacement
 FAV	 Fav / Marker / PC
 TTX	 Text / Goto
 Pause/Hold/Cancel	 Pause / Step / Freeze
 Cancel/USB/Card	 Shift + Exit / Cancel / Clear
 EPG/List	 Shift + Guide / EPG / -/-
 Stop/Index/Stop	 Stop / Hold
 Size	 Shift + Zoom /
 Play/Play	 Play / Slow
 Reveal/Reveal	 Setup / OPT /
 Subtitle/Sub.PG	 Subtitle / EQ
 <</FR	 << / Tune-
 Red	 Red / Netflix / Search
 >>/FF	 >> / Tune+
 Green	 Green / APP / Repeat
 I<</Prev	 I<< / Preset-
 Yellow	 Yellow / YouTube / Repeat
 >>I/Next	 >>I / Preset+

Original	Replacement
 Blue	 Blue / Prime Video / Random

