 

 

 

 
 

 






 
 
 

 
 
 


 
 
 
 



 
 


 





Original	Replacement	Original	Replacement
 Power	 Power	 Info	 Info
 Mute	 Mute	 Exit	 Exit
 1	 1	 Up	 Up
 2	 2	 Down	 Down
 3	 3	 Right	 Right
 4	 4	 Left	 Left
 5	 5	 OK	 Ok
 6	 6	 CH+	 Ch +
 7	 7	 CH-	 Ch -
 8	 8	 Vol+	 Vol +
 9	 9	 Vol-	 Vol -
 0	 0	 Rec	 Rec
 Movie	 Media	 Stop	 Stop
 FAV/Repeat	 Pre Ch	 Play	 Play
 Menu	 Menu	 Pause	 Pause
 Lang	 Dual	 I<	 I<<
 EPG	 Guide	 >I	 >>I





Original	Replacement	Original	Replacement
 <</Alt	 <<		
 >>/List	 >>		
 Red	 Red		
 Blue	 Blue		
 Green	 Green		
 Yellow	 Yellow		
 Text	 Text		
 Tv/Radio	 TV/R		
 Audio	 Shift + Dual		
 Subt	 Subt		
 Zoom	 Eject		
 Device	 AV		
 Time Shift	 Format		
 File	 Back		
 Mosaic	 Smart		
 A.Scan/Goto	 Shift + Smart		

