


Original		Replacement		Original		Replacement	
	Standby		Power		Title / TTX		Text / Goto
	Mute		Mute / Dimmer		Source		AV / Input / RDS
	Play		Play / Slow		Menu / PBC		Menu / Home
	Pause		Pause / Step / Freeze		Up		Up
	Stop		Stop / Hold		Left / Fav-		Left
	Rec		Rec / Rec Mode		Enter		OK
	<<		<< / Tune-		Right / Fav+		Right
	>>		>> / Tune+		Clear		Exit / Cancel / Clear
	I<<		I<< / Preset-		Down		Down
	>>I		>>I / Preset+		Return		Back / Return
	Language		Audio / Lang I/II		Vol+		Vol+
	SUBT / RIP		Subtitle / EQ		L/R		Smart / List
	Open / Close		Eject / Surround		Vol-		Vol-
	Zoom		Zoom / Size		OSD		Display / Media
	Time		Sleep / Timer		1		1
	TV / Radio		TV/Radio /		2		2
	Setup		Setup / OPT /		3		3

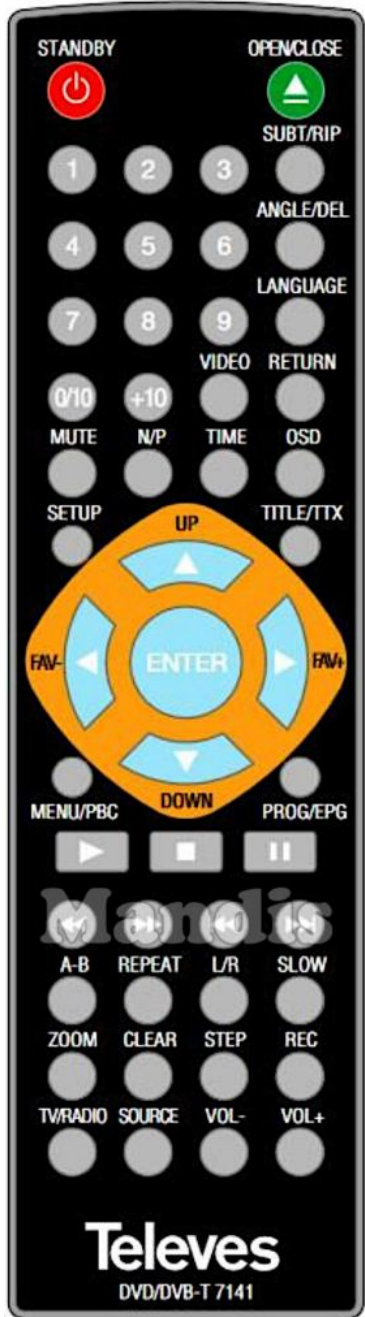



Original		Replacement	
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
+10	+10	GUIDE EPG	Guide / EPG / -/--
+10	0/10	HDMI - BAT 0	0
REPEAT	Repeat	APP REPEAT	Green / APP / Repeat
A-B	A-B	YouTube REPEAT A-B	Yellow / YouTube / Repeat
SLOW	Slow	SHIFT + SLOW	Shift + Play /
STEP	Step	SHIFT + STEP - FREEZE	Shift + Pause / Step /
PROG/EPG	Prog / EPG	SHIFT + PROGRAM TV/RADIO	Shift + TV/Radio / Program
ANGLE/DEL	Angle / Del	SHIFT + RETURN BACK	Shift + Back / Return
N/P	N/P	SHIFT + MEDIA DISPLAY	Shift + Display / Media
VIDEO	Video	SHIFT + VIDEO 4	Shift + 4
PROG/EPG	Prog / EPG	SHIFT + GUIDE EPG	Shift + Guide / -/--

Original		Replacement	

