



Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol-
	Tv/AV		AV / Input / RDS		Zoom		Zoom / Size
	1		1		P-		CH- / Page-
	2		2		Up		Up
	3		3		Left		Left
	4		4		OK/Select		OK
	5		5		Right		Right
	6		6		Menu		Menu / Home
	7		7		Down		Down
	8		8		Mute		Mute / Dimmer
	9		9		Red / Picture		Red / Netflix / Search
	-/--		Shift + Guide / EPG / -/--		Red / Picture		Picture / Format
	0		0		Green / Sound		Green / APP / Repeat
	Back		Back / Return		Green / Sound		Sound / Title
	Vol+		Vol+		Yellow / Sleep		Yellow / YouTube / Repeat
	Scan		Smart / List		Yellow / Sleep		Sleep / Timer
	P+		CH+ / Page+		Blue / Call		Blue / Prime Video / Random





Original	Replacement
TEXT	GOTO TEXT Text / Goto
MIX	SHIFT + GOTO TEXT Shift + Text /
SIZE	SHIFT + SIZE ZOOM Shift + Zoom /
INDEX	REC MODE Rec / Rec Mode
HOLD	HOLD Stop / Hold
REVEAL	SLOW Play / Slow
SUBPAGE	EQ SUBTITLE Subtitle / EQ
CANCEL	CLEAR EXIT Exit / Cancel / Clear
DVB MENU	TOP MENU D.MENU D.Menu / Top
i	ANGLE INFO Info / Angle
EPG	GUIDE EPG Guide / EPG / -/-
ESC	PC FAV MARKER Fav / Marker / PC
DVB	MEDIA DISPLAY Display / Media
FREEZE	STEP - FREEZE II Pause / Step / Freeze
I/II	LANG I/II AUDIO Audio / Lang I/II

Original	Replacement

