



Original		Replacement		Original		Replacement	
	Power		Power		Menu		Menu
	Mute		Mute		TV / AV		AV
	1		1		Sleep		Sleep
	2		2		Up / PR+		Up
	3		3		Up / PR+		Ch +
	4		4		Down / PR-		Down
	5		5		Down / PR-		Ch -
	6		6		Right / Vol+		Right
	7		7		Right / Vol+		Vol +
	8		8		Left / Vol-		Left
	9		9		Left / Vol-		Vol -
	0		0		OK		Ok
	*		Guide		Text / Mix		Text
	*		Pre Ch		Q.View		Options
	PSM		Format		List		List
	SSM		Shift + Dual		Red		Red
	I/II		Dual		Green		Green





Original		Replacement		Original	Replacement
	Yellow		Yellow		
	Blue		Blue		
	Update		Subt		
	Time		Eject		
	Reveal		TV/R		
	Hold		Stop		
	PIP/*		3D		
	ARC		Smart		
	TV / PC		Back		
	Position/*		Media		
	Swap/*		Shift + Media		
	Input/*		Shift + AV		
	Mode/*		Shift + 3D		
	PR+/*		Shift + Ch +		
	PR-/*		Shift + Ch -		

