 




 
 
















 

 












Original	Replacement
 Power	 Power
 TV	 TV/R
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Source	 AV
 Info	 Info
 P+	 Ch +
 P-	 Ch -

Original	Replacement
 Vol+	 Vol +
 Vol-	 Vol -
 Option	 Options
 Smart Tv	 Smart
 Guide	 Guide
 Menu	 Menu
 Back	 Back
 Exit	 Exit
 List	 List
	 Shift + Smart
	 Shift + Pre Ch
 FAV	 Pre Ch
 OO/Lang	 Dual
 Subtitle	 Subt
 Text	 Text
 Red	 Red
 Eco	 3D



