 


Original	Replacement
Power	Power
Vol+	Vol+
Vol-	Vol-
Mute	Mute / Dimmer
Return	Back / Return
PR+	CH+ / Page+
>>	>> / Preset+
<<	<< / Preset-
PR-	CH- / Page-
Exit	Exit / Cancel / Clear
Menu	Menu / Home
Up	Up
Down	Down
Right/Zoom+	Right
Left/Zoom-	Left
OK	OK
Red	Red / Netflix / Search

 
Original	Replacement
Sound	Sound / Title
Green	Green / APP / Repeat
List	Shift + Smart / List
Yellow	Yellow / YouTube / Repeat
Info	Info / Angle
Mosaic	Smart / List
Blue	Blue / Prime Video / Random
Violet	Display / Media
Text	Text / Goto
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8

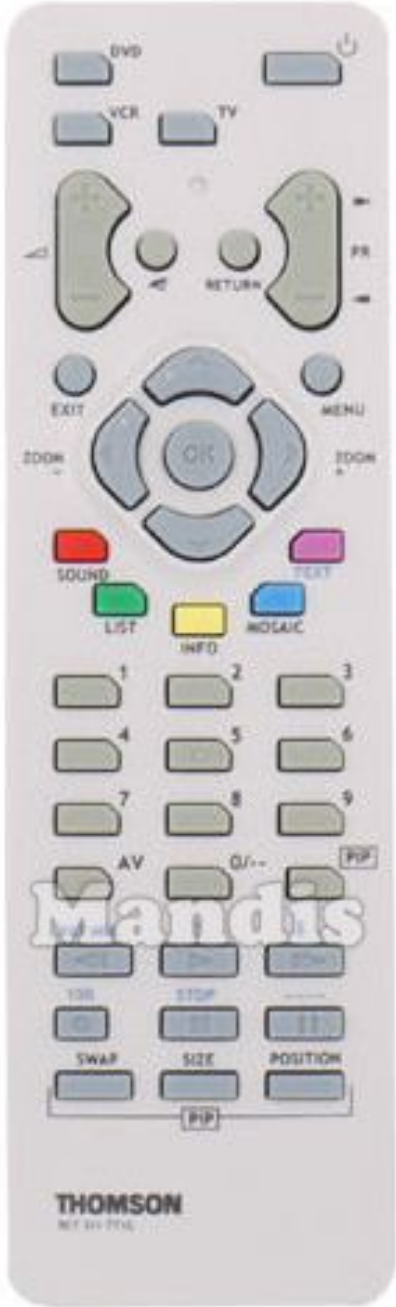







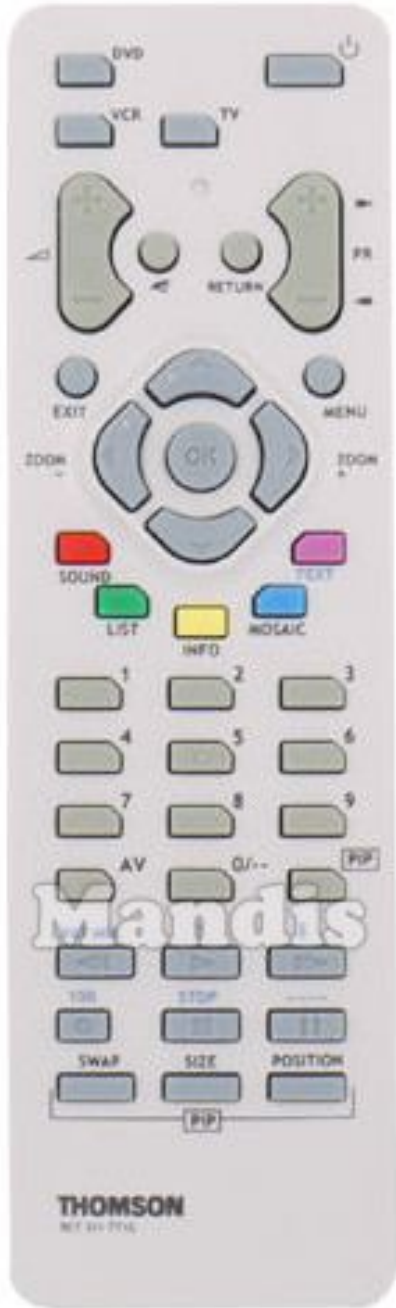





 























	Original	Replacement	Original	Replacement
	9	9		
	0/-/--	0		
	AV	RDS AV INPUT		
	PIP	ZOOM		
	<</Pat-Mix	TUNE- << / Tune-		
	Play/?	SLOW		
	>>	TUNE+ >> / Tune+		
	Rec/100	REC MODE		
	Stop	HOLD		
	Pause/----	STEP-FREEZE		
	Swap PIP	OPT-TOOLS SETUP		
	Size PIP	FORMAT PICTURE		
	Position PIP	PROGRAM TV/RADIO		

 




Original	Replacement
 Power	 Power
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Return	 Back / Return
 PR+	 CH+ / Page+
 >>	 >> / Preset+
 PR-	 CH- / Page-
 <<	 << / Preset-
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Up	 Up
 Down	 Down
 Right/Zoom+	 Right
 Left/Zoom-	 Left
 OK	 OK
 Red	 Red / Netflix / Search

Original	Replacement
 Sound	 Sound / Title
 Green	 Green / APP / Repeat
 List	 Shift + Smart / List
 Info	 Info / Angle
 Yellow	 Yellow / YouTube / Repeat
 Mosaic	 Smart / List
 Blue	 Blue / Prime Video / Random
 Violet	 Display / Media
 Text	 Text / Goto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

 


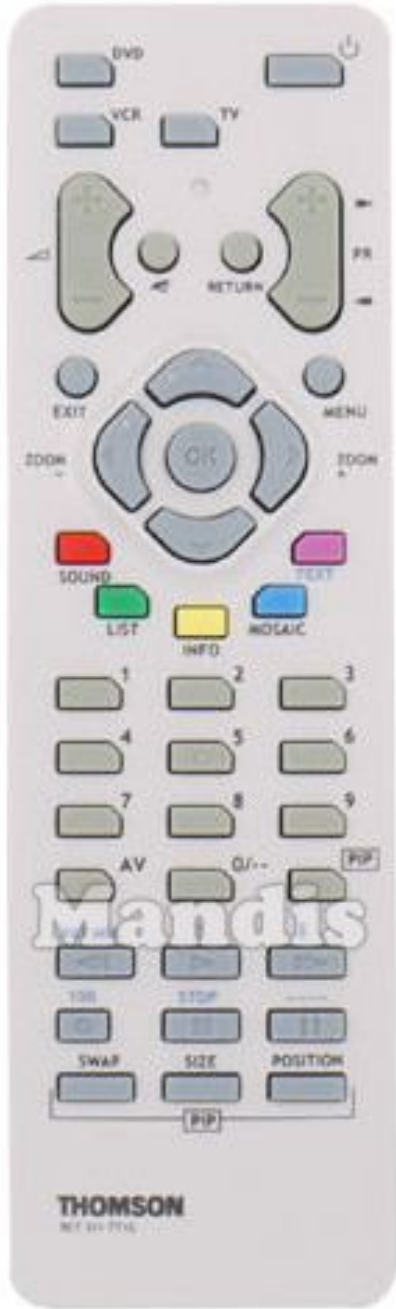







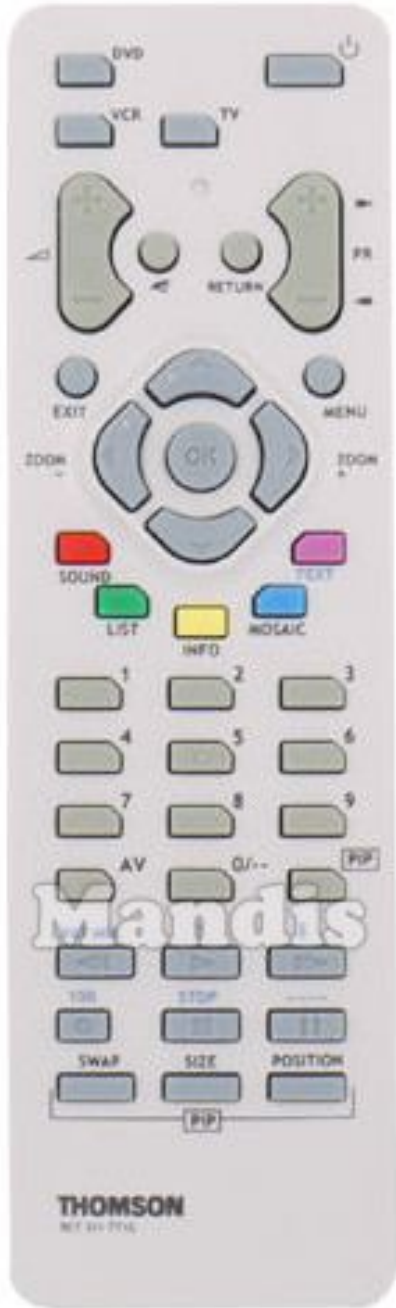





















Original	Replacement
 9	 9
 0/-/-	 0
 AV	 AV / Input / RDS
 PIP	 Zoom / Size
 <</Pat-Mix	 << / Tune-
 Play/?	 Play / Slow
 >>	 >> / Tune+
 Rec/100	 Rec / Rec Mode
 Stop	 Stop / Hold
 Pause/----	 Pause / Step / Freeze
 Swap PIP	 Setup / OPT /
 Size PIP	 Picture / Format
 Position PIP	 TV/Radio /

Original	Replacement

 


 
 
 
 

 
 

 

 
 


 
 

 
 
 
 
 

 


Original	Replacement
 Power	 Power
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Return	 Back / Return
 PR+	 CH+ / Page+
 >>	 >> / Preset+
 <<	 << / Preset-
 PR-	 CH- / Page-
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Up	 Up
 Down	 Down
 Right/Zoom+	 Right
 Left/Zoom-	 Left
 OK	 OK
 Red	 Red / Netflix / Search

Original	Replacement
 Sound	 Sound / Title
 List	 Shift + Smart / List
 Green	 Green / APP / Repeat
 Info	 Info / Angle
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Mosaic	 Smart / List
 Violet	 Display / Media
 Text	 Text / Goto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

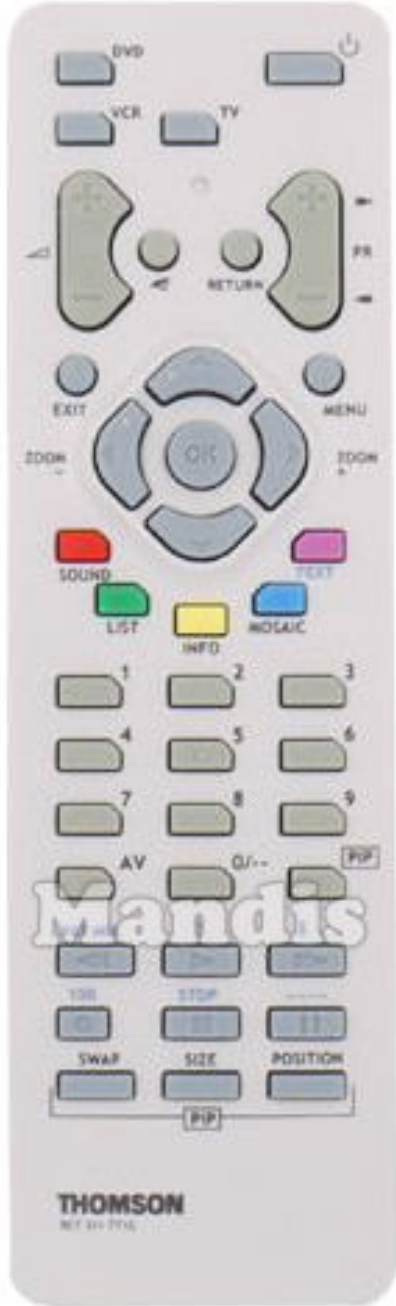



Original	Replacement	Original	Replacement
 9	 9		
 0/-/--	 0		
 AV	 AV / Input / RDS		
 PIP	 Zoom / Size		
 <</Pat-Mix	 << / Tune-		
 Play/?	 Play / Slow		
 >>	 >> / Tune+		
 Rec/100	 Rec / Rec Mode		
 Stop	 Stop / Hold		
 Pause/----	 Pause / Step / Freeze		
 Size PIP	 Picture / Format		
 Position PIP	 TV/Radio /		

