



Original	Replacement	Original	Replacement
 Standby	 Power	 Prog-	 Ch -
 Open/Close	 Eject	 Timer Prog	 Sleep
 Input Select	 AV	 Variable Replay	 Pre Ch
 HDMI	 TV/R	 Variable Skip	 Shift + Pre Ch
 1	 1	 Top Menu	 Menu
 2	 2	 Disc Menu	 D. Menu
 3	 3	 Up	 Up
 4	 4	 Left	 Left
 5	 5	 Enter	 Ok
 6	 6	 Right	 Right
 7	 7	 Down	 Down
 8	 8	 Display	 Info
 9	 9	 Return	 Shift + Back
 0	 0	 Mode	 Yellow
 Setup	 Options	 Search	 Blue
 Clear	 Exit	 <<	 <<
 Prog+	 Ch +	 Play	 Play





Original	Replacement	Original	Replacement
 FWD	 >>		
 SKIP	 I<<		
 STOP	 Stop		
 SKIP	 >>I		
 PAUSE	 Pause		
 VCR	 +  Shift + 1		
 HDD	 +  Shift + 2		
 DVD	 +  Shift + 3		
 TIME SLIP	 +  Shift + Sleep		
 DUBBING	 Back		
 REC MODE	 +  Shift + Rec		
 REC	 Rec		
 SUBTITLE	 Subt		
 1.3x/0.8x PLY	 Format		
 O)/Audio	 Dual		
 Sat Link	 3D		

