





 

 

 













 







 


 










 
 

 

 











 







Original		Replacement		Original		Replacement	
	Mute		Mute / Dimmer		Up		Up
	Power		Power		Left		Left
	1		1		OK		OK
	2		2		Right		Right
	3		3		Down		Down
	4		4		Exit		Exit / Cancel / Clear
	5		5		Recall		Back / Return
	6		6		Menu		Menu / Home
	7		7		CH+		CH+ / Page+
	8		8		Text		Text / Goto
	9		9		Option		Setup / OPT /
	EPG		Guide / EPG / -/--		Vol+		Vol+
	0		0		CH-		CH- / Page-
	List		Smart / List		F1		Shift + 1
	Mode		D.Menu / Top		F2		Shift + 2
	i		Info / Angle		Vol-		Vol-
	TV/R Live		TV/Radio /		Rec		Rec / Rec Mode





	Original	Replacement	Original	Replacement
	Play	 Play / Slow		
	Archive	 Display / Media		
	<<	 << / Tune-		
	Stop	 Stop / Hold		
	Pause	 Pause / Step / Freeze		
	>>	 >> / Tune+		
	Red	 Red / Netflix / Search		
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		

