














 











Original		Replacement		Original		Replacement	
	Power		Power		Menu		Menu / Home
	Mute		Mute / Dimmer		Exit		Exit / Cancel / Clear
	Nicam/A2		Shift + Audio / Lang I/II		1		1
	Sleep		Sleep / Timer		2		2
	Aspect		Zoom / Size		3		3
	USB/CR		Shift + 8		4		4
	Display		Display / Media		5		5
	Auto		Smart / List		6		6
	PMode		Picture / Format		7		7
	SMode		Sound / Title		8		8
	DTV		D.Menu / Top		9		9
	Source		AV / Input / RDS		0		0
	Up		Up		-/--		Guide / EPG / -/--
	Left		Left		Back		Back / Return
	Enter		OK		CH+		CH+ / Page+
	Right		Right		Info		Info / Angle
	Down		Down		Audio		Audio / Lang I/II





Original	Replacement	Original	Replacement
	Vol+		Yellow / YouTube / Repeat
	CH- / Page-		Blue / Prime Video / Random
	Fav / Marker / PC		
	TV/Radio /		
	Vol-		
	Text / Goto		
	Play / Slow		
	Pause / Step / Freeze		
	Stop / Hold		
	Subtitle / EQ		
	Rec / Rec Mode		
	<< / Tune-		
	>> / Tune+		
	I<< / Preset-		
	>>I / Preset+		
	Red / Netflix / Search		
	Green / APP / Repeat		

Original	Replacement	Original	Replacement
	Yellow / YouTube / Repeat		Yellow / YouTube / Repeat
	Blue / Prime Video / Random		Blue / Prime Video / Random

