
 

 




 








 






 
 



















 













 





 

 






	Original	Replacement		Original	Replacement
	PLII PARA.	 D. Menu		Display / Sleep	 Sleep
	Adjust -	 +  Shift + Down		Return /	 Back
	DSP -	 +  Shift + Left		Stop / P.Scan	 Stop
	Power	 Power		<< / Tune -	 <<
	CH/Level Up	 Ch +		>> / Tune +	 >>
	CH/Level Down	 Ch -		I<< / Preset -	 I<<
	Vol+	 Vol +		>>I / Preset +	 >>I
	Vol-	 Vol -		1 / Tuner	 1
	Mute	 Mute		2 / CD	 2
	Up / PTY Select	 Up		3 / AUX	 3
	Down / Search M.	 Down		4 / Tape	 4
	Right / EON PTY	 Right		5	 5
	Left / EON TA	 Left		6 / Video 1	 6
	Enter / RDS	 Ok		7 / Video 2	 7
	Setup / OSD	 Options		8 / Video 3	 8
	Menu / T.Tone	 Menu		9	 9
	Display / Sleep	 Info		0	 0





Original	Replacement
Adjust +	+ Shift + Up
7CH Dir	3D
CH Sel / T/V	TV/R
SPK SET	Exit
Auto	Subt
DSP +	+ Shift + Right
Stereo	Dual
CD	Green
AUDIO	Red
AUX	Yellow
TV	Blue
VCR	+ Shift + Red
SAT	+ Shift + Blue
CABLE	+ Shift + Yellow
DVD	+ Shift + Green
AUX Power /	+ Shift + Power
AUX Rec	+ Shift + Rec

Original	Replacement
AUX Pause	+ Shift + Pause
AUX Play	+ Shift + Play
AUX Stop / P.Scan	+ Shift + Stop
AUX << / Tune	+ Shift + <<
AUX >> / Tune	+ Shift + >>
AUX >> / Preset	+ Shift + >>
AUX << / Preset -	+ Shift + <<





Original	Replacement
 AUDIO	 Red
 CD	 Green
 AUX	 Yellow
 TV	 Blue
 VCR	 Shift + Red
 DVD	 Shift + Green
 CABLE	 Shift + Yellow
 SAT	 Shift + Blue
 TV Power	 Power
 TV CH/Level +	 Ch +
 TV CH/Level -	 Ch -
 TV CH Sel. / T/V	 Media
 TV Mute	 Mute
 TV Volume +	 Vol +
 TV Volume -	 Vol -
 TV 1	 1
 TV 2	 2

Original	Replacement
 TV 3	 3
 TV 4	 4
 TV 5	 5
 TV 6	 6
 TV 7	 7
 TV 8	 8
 TV 9	 9
 TV 0	 0
 CABLE Power	 Shift + Power
 CABLE CH/Level +	 Shift + Ch +
 CABLE CH/Level -	 Shift + Ch -
 CABLE CH Sel.	 Shift + Smart
 CABLE Mute	 Shift + Mute
 CABLE Volume +	 Shift + Vol +
 CABLE Volume -	 Shift + Vol -
 CABLE 1	 Shift + 1
 CABLE 2	 Shift + 2







	Original	Replacement	
AUX 3	CABLE 3	SHIFT + 3	Shift + 3
TAPE 4	CABLE 4	SHIFT + 4	Shift + 4
5	CABLE 5	SHIFT + 5	Shift + 5
VIDEO1 6	CABLE 6	SHIFT + 6	Shift + 6
VIDEO2 7	CABLE 7	SHIFT + 7	Shift + 7
VIDEO3 8	CABLE 8	SHIFT + 8	Shift + 8
9	CABLE 9	SHIFT + 9	Shift + 9
0	CABLE 0	SHIFT + 0	Shift + 0

Original	Replacement






 




Original	Replacement
 AUDIO	 Red
 CD	 Green
 AUX	 Yellow
 TV	 Blue
 VCR	 Shift + Red
 DVD	 Shift + Green
 SAT	 Shift + Blue
 CABLE	 Shift + Yellow
 DVD Power	 Power
 DVD Menu /	 Menu
 DVD Audio Sel.	 Dual
 DVD Subtitle	 Subt
 DVD Zoom	 3D
 DVD OSD	 Format
 DVD Up	 Up
 DVD Left	 Left
 DVD Enter	 Ok

Original	Replacement
 DVD Right	 Right
 DVD Down	 Down
 DVD Display	 Info
 DVD Pause	 Pause
 DVD Play	 Play
 DVD Stop / P.Scan	 Stop
 DVD <<	 <<
 DVD >>	 >>
 DVD I<<	 I<<
 DVD >>I	 >>I
 DVD 1	 1
 DVD 2	 2
 DVD 3	 3
 DVD 4	 4
 DVD 5	 5
 DVD 6	 6
 DVD 7	 7





	Original	Replacement	
VIDEO3 8	DVD 8		8
9	DVD 9		9
0	DVD 0		0
POWER 	SAT Power	 + 	Shift + Power
CH/LEVEL 	SAT CH/Level +	 + 	Shift + Ch +
CH/LEVEL 	SAT CH/Level -	 + 	Shift + Ch -
CH SEL 	SAT CH Sel.	 + 	Shift + Media
MUTE 	SAT Mute	 + 	Shift + Mute
VOLUME 	SAT Volume +	 + 	Shift + Vol +
VOLUME 	SAT Volume -	 + 	Shift + Vol -
TUNER 1	SAT 1	 + 	Shift + 1
CD 2	SAT 2	 + 	Shift + 2
AUX 3	SAT 3	 + 	Shift + 3
TAPE 4	SAT 4	 + 	Shift + 4
5	SAT 5	 + 	Shift + 5
VIDEO1 6	SAT 6	 + 	Shift + 6
VIDEO2 7	SAT 7	 + 	Shift + 7

	Original	Replacement	
VIDEO3 8	SAT 8	 + 	Shift + 8
9	SAT 9	 + 	Shift + 9
0	SAT 0	 + 	Shift + 0





Original	Replacement
 AUDIO	 Red
 CD	 Green
 AUX	 Yellow
 TV	 Blue
 VCR	 Shift + Red
 SAT	 Shift + Blue
 CABLE	 Shift + Yellow
 DVD	 Shift + Green
 CD Pause	 Pause
 CD Play	 Play
 CD Stop	 Stop
 CD I<<	 I<<
 CD >>I	 >>I
 CD 1	 1
 CD 2	 2
 CD 3	 3
 CD 4	 4

Original	Replacement
 CD 5	 5
 CD 6	 6
 CD 7	 7
 CD 8	 8
 CD 9	 9
 CD 0	 0
 VCR Power	 Shift + Power
 VCR CH Sel.	 Shift + Media
 VCR Rec	 Shift + Rec
 VCR Play	 Shift + Play
 VCR Mute	 Shift + Mute
 VCR >>	 Shift + >>
 VCR <<	 Shift + <<
 VCR Volume -	 Shift + Vol -
 VCR Volume +	 Shift + Vol +
 VCR CH+	 Shift + Ch +
 VCR CH-	 Shift + Ch -



