 
 

 



 
 
 


 
 
 








 

 

 

 



 

 

 
 







 


Original	Replacement
	Power
	Source
	Vol +
	Vol -
	Mute
	Ch +
	Ch -
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0

Original	Replacement
	TV
	Recall
	World
	Menu
	Exit
	Back
	i/Info
	Guide
	[≡]/Text
	*/O
	*/O..
	Lang
	[≡]..
	[-O-]
	Red
	Green
	Yellow





Original	Replacement	Original	Replacement
	Blue		Blue
	Rec		Rec
	Play		Play
	Stop		Stop
	Pause		Pause
	<<		<<
	>>		>>
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Music/Photo/Movi		Smart
	Q.Menu		D. Menu

