













 




 






 







 






 













| Original | Replacement |
|--|---|
|  Power |  Power |
|  A1 |  Shift + Smart / List |
|  V-Format |  Picture / Format |
|  Timer |  Sleep / Timer |
|  Mute |  Mute / Dimmer |
|  Tms |  AV / Input / RDS |
|  B2 |  Shift + Display / Media |
|  F1 |  Shift + 1 |
|  Tv/Sat |  Smart / List |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |

| Original | Replacement |
|--|---|
|  9 |  9 |
|  Tv/Radio |  TV/Radio / |
|  0/Zoom |  0 |
|  0/Zoom |  Zoom / Size |
|  Recall |  Back / Return |
|  Find |  Shift + Red / Netflix / |
|  Vol- |  Vol- |
|  Page- |  CH- / Page- |
|  SAT |  Display / Media |
|  Rec |  Rec / Rec Mode |
|  Vol+ |  Vol+ |
|  Page+ |  CH+ / Page+ |
|  FAV |  Fav / Marker / PC |
|  Menu |  Menu / Home |
|  Up |  Up |
|  Info |  Info / Angle |
|  Left |  Left |



